


MILLIMETER WAVE RADAR SENSOR ASSY REPLACEMENT

8205T-01

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (–) battery terminal to prevent airbag and seat belt pretensioner activation.

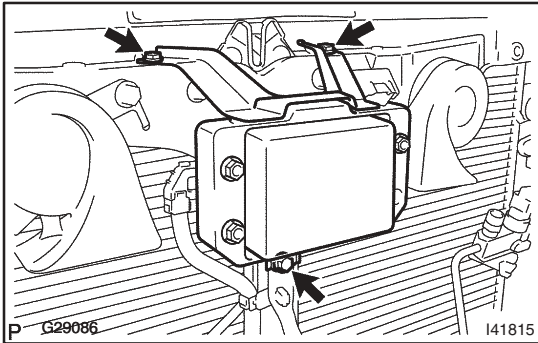

2. REMOVE MILLIMETER WAVE RADAR SENSOR ASSY

- (a) Disconnect the connector.
- (b) Remove the 3 bolts and radar sensor.

3. INSTALL MILLIMETER WAVE RADAR SENSOR ASSY

- (a) Install the radar sensor with the 3 bolts.

Torque: 5.5 N·m (56 kgf·cm, 49 in·lbf)

- (b) Connect the connector.

4. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

5. PERFORM INITIALIZATION (See Pub. No. RM1049E, page 01–20)

NOTICE:

Certain systems need to be initialized after disconnecting and reconnecting the cable from the negative (–) battery terminal.

6. ADJUST MILLIMETER WAVE RADAR SENSOR ASSY ([See page 82-2](#))