



INSPECTION

1. REMOVE V-BANK COVER
2. REMOVE AIR CLEANER INLET AND INTAKE AIR CONNECTOR
3. DRAIN ENGINE COOLANT
4. DISCONNECT THROTTLE BODY (See page FI-38)

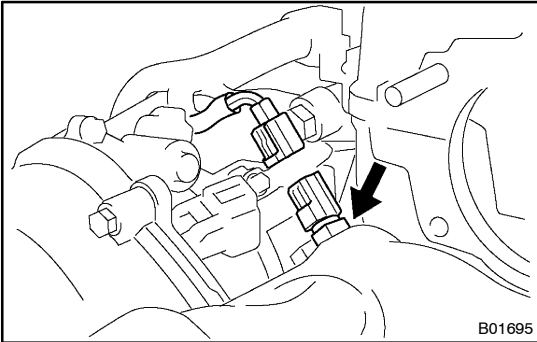

5. REMOVE WATER TEMPERATURE SENSOR

- (a) Disconnect the water temperature sensor connector.
- (b) Remove the water temperature sensor and gasket.

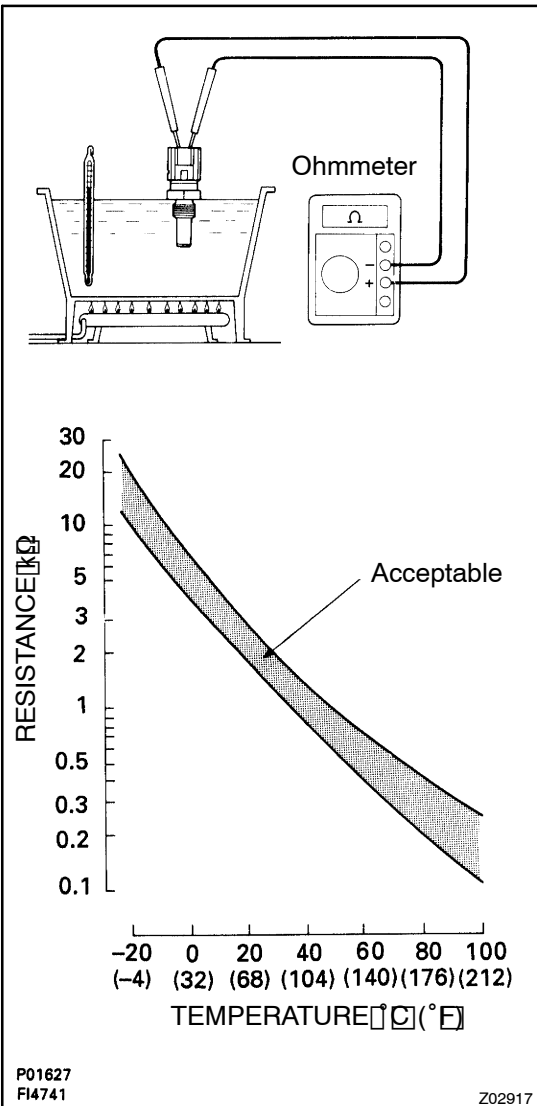

6. INSPECT WATER TEMPERATURE SENSOR

Using an ohmmeter, measure the resistance between the terminals.

Resistance: Refer to the chart graph

If the resistance is not as specified, replace the sensor.

7. REINSTALL water temperature SENSOR

- (a) Install a new gasket and the water temperature sensor.

Torque: 20 N·m (200 kgf·cm, 14 ft·lbf)

- (b) Connect the water temperature sensor connector.

8. RECONNECT THROTTLE BODY (See page FI-41)

9. REFILL WITH ENGINE COOLANT

10. REINSTALL INTAKE AIR CONNECTOR AND AIR CLEANER INLET

11. REINSTALL V-BANK COVER