


ADJUSTMENT

1. PUT VEHICLE UNDER THESE CONDITIONS

- (a) Prepare the vehicle by performing the following.
- Make sure the body around the headlamps has no damage or deformation.
 - Fill the fuel tank to full.
 - Inflate the tires to an appropriate pressure (see page 28-1).
 - Make sure the vehicle is on a level surface.
 - Sit a person weighting approximately 75 kg (165 lb) in the driver seat.
 - Bounce the vehicle up and down to settle the vehicle suspension.
- (b) Start the engine.

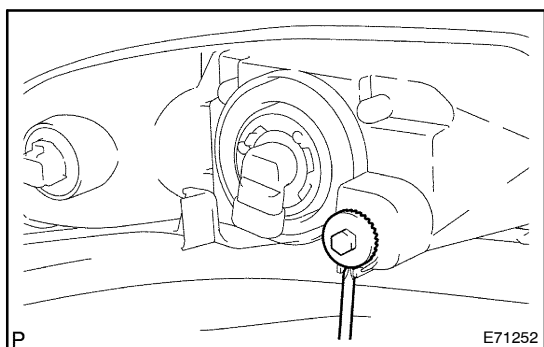

2. ADJUST FOG LIGHT AIM

- (a) The fog lamp aim can be adjusted by moving the aiming screw in the vertical direction.

HINT:

The fog lamp aim moves up when turning the screw clockwise, while it moves down when turning the screw counterclockwise.