


## E ELECTRICAL WIRING ROUTING

### Position of Parts in Body

[LHD]

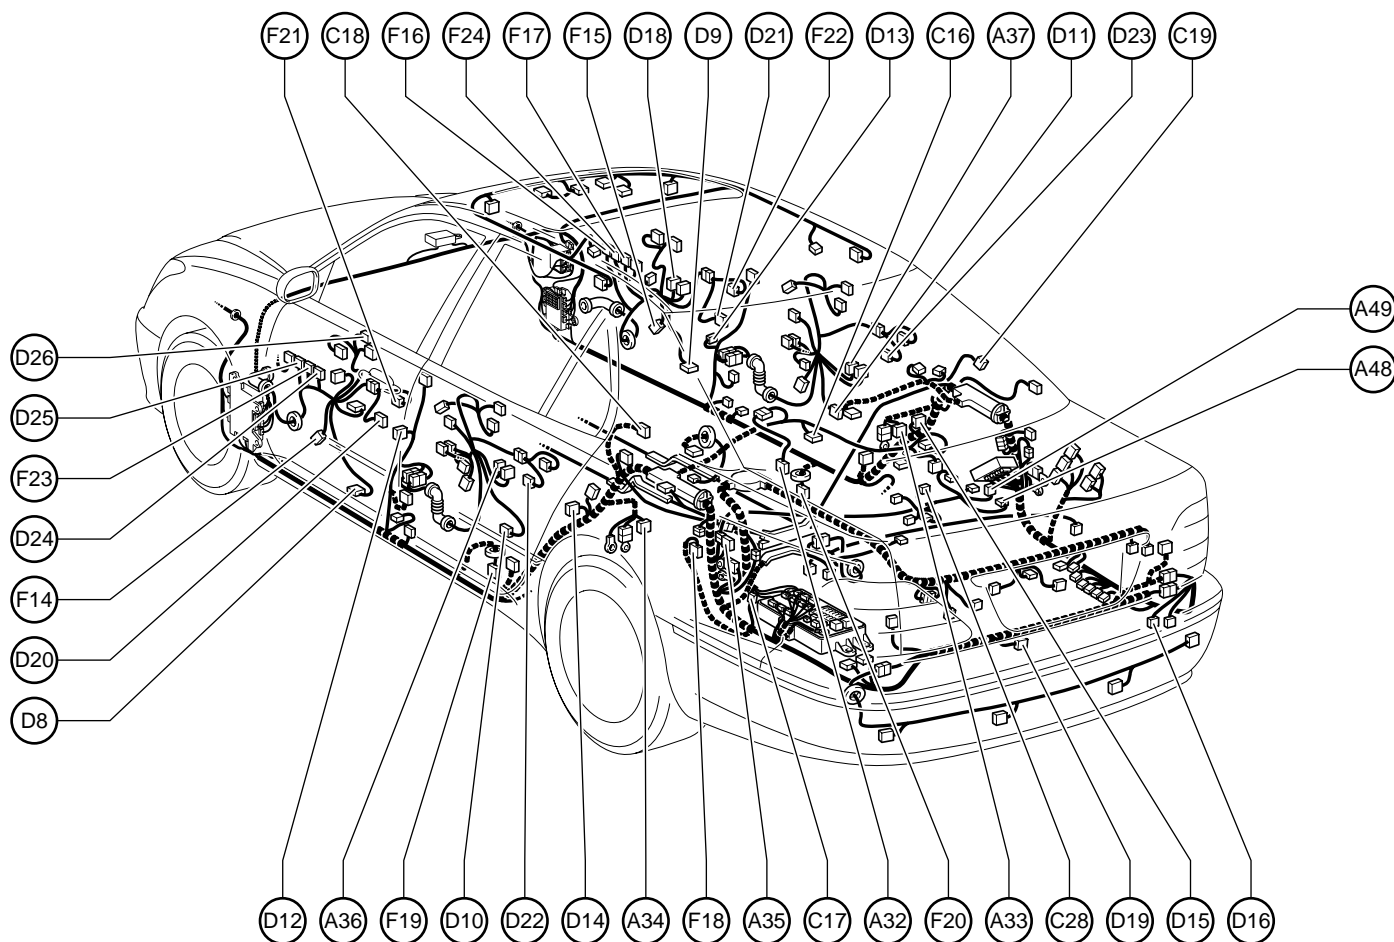

A32 A/C Solar Sensor (Rear)  
 A33 ABS Speed Sensor Rear RH  
 Pad Wear Indicator SW Rear RH  
 A34 ABS Speed Sensor Rear LH  
 A35 Acceleration Sensor  
 A36 Ashtray Illumination Rear LH  
 A37 Ashtray Illumination Rear RH  
 A48 A/C Amplifier  
 A49 Air Purifier Light

C16 Clearance Sonar Buzzer (Rear)  
 C17 Clearance Sonar ECU  
 C18 Curtain Shield Airbag Squib LH  
 C19 Curtain Shield Airbag Squib RH  
 C28 Cool Box Illumination

D 8 Door Courtesy Light Front LH  
 D 9 Door Courtesy Light Front RH  
 D10 Door Courtesy Light Rear LH  
 D11 Door Courtesy Light Rear RH  
 D12 Door Courtesy SW Front LH  
 D13 Door Courtesy SW Front RH  
 D14 Door Courtesy SW Rear LH  
 D15 Door Courtesy SW Rear RH

D16 Door Lock Control Receiver  
 D18 Door Lock Control SW Front RH  
 D19 Door Lock SW (Luggage)  
 D20 Door Oscillator Front LH  
 D21 Door Oscillator Front RH  
 D22 Door Oscillator Rear LH  
 D23 Door Oscillator Rear RH  
 D24 Driver Door ECU  
 D25 Driver Door ECU  
 D26 Driving Position Memory SW

F 14 Front Door Speaker LH  
 F 15 Front Door Speaker RH  
 F 16 Front Passenger Door ECU  
 F 17 Front Passenger Door ECU  
 F 18 Fuel Lid Opener Motor  
 F 19 Fuel Pump  
 Fuel Sender (Main)  
 F 20 Fuel Sender (Sub)  
 F 21 Front Door Outside Handle LH  
 F 22 Front Door Outside Handle RH  
 F 23 Front Door with Motor Lock Assembly LH  
 F 24 Front Door with Motor Lock Assembly RH