


CLEARANCE WARNING ECU ASSY REPLACEMENT

6714J-01

HINT:

- COMPONENTS: [SEE PAGE 75-44.](#)
 - LOCATION: [SEE PAGE 67-2.](#)
 - Installation is in the reverse order of removal.
1. REMOVE REAR FLOOR FINISH PLATE ([SEE PAGE 75-47](#))
 2. REMOVE ROOM PARTITION NET ASSY ([SEE PAGE 75-47](#))
 3. REMOVE LUGGAGE COMPARTMENT FLOOR MAT ([SEE PAGE 75-47](#))
 4. REMOVE ROPE HOOK ASSY ([SEE PAGE 75-47](#))
 5. REMOVE REAR FLOOR FINISH PLATE ([SEE PAGE 75-47](#))
 6. REMOVE TOOL CASE ([SEE PAGE 75-47](#))
 7. REMOVE SIDE TRIM TOOL BAG COVER ([SEE PAGE 75-47](#))
 8. REMOVE LUGGAGE COMPARTMENT TRIM COVER ASSY LH ([SEE PAGE 75-47](#))

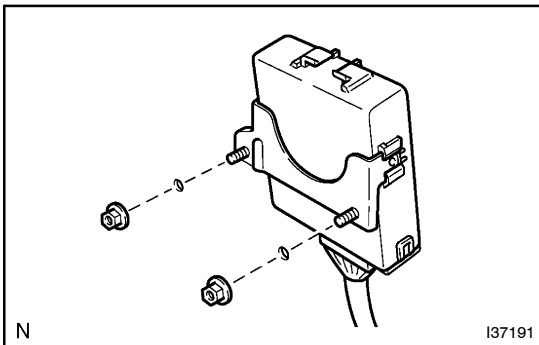

9. REMOVE CLEARANCE WARNING ECU ASSY

- (a) Disconnect the connector.
- (b) Remove the 2 nuts and clearance warning ECU assy.