

## AVC-LAN CIRCUIT (RADIO RECEIVER ASSY - MULTI-DISPLAY)


### CIRCUIT DESCRIPTION

Each unit of the navigation system connected to AVC-LAN (communication bus) communicates by transferring the signals from each switch.

When +B short and GND short occur in this AVC-LAN, navigation system will not function normally as communication is discontinued.


In AVC-LAN, multi-display becomes the communication master, and the radio receiver assy has enough resistance necessary for transmitting the communication.

### WIRING DIAGRAM

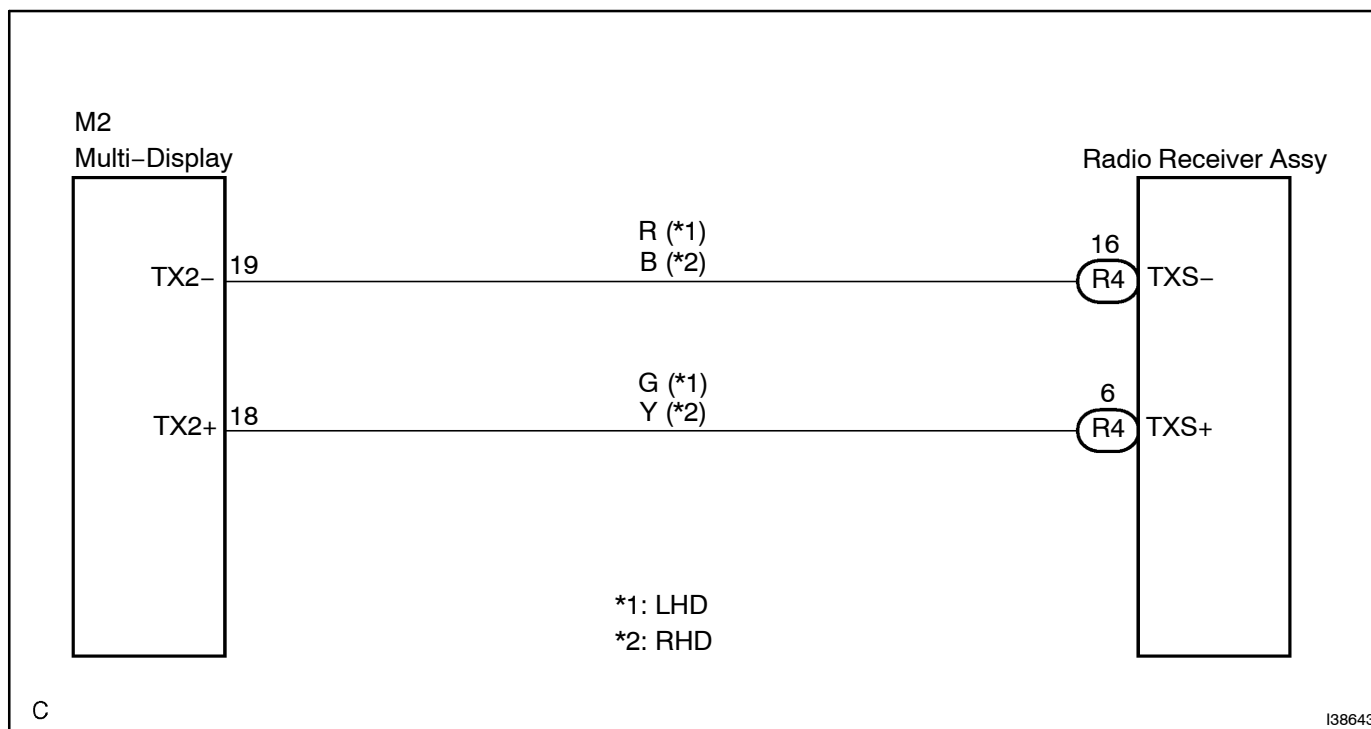

INSPECTION PROCEDURE

1 INSPECT RADIO RECEIVER ASSY

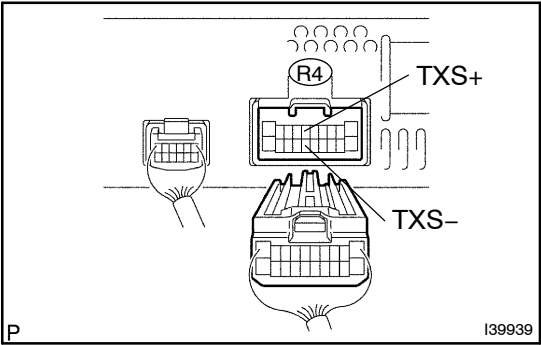

(a) Measure the resistance according to the value(s) in the table below.


Standard:

Tester Connection	Condition	Specified Condition
TXS+ - TXS-	Always	60 to 80 $\Omega$

NG REPLACE RADIO RECEIVER ASSY (SEE PAGE 67-5)

OK

2 CHECK HARNESS AND CONNECTOR (RADIO RECEIVER ASSY - MULTI-DISPLAY)

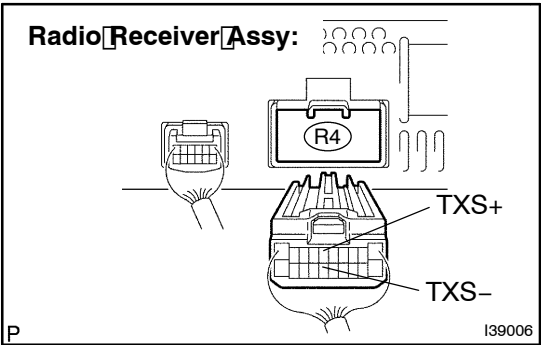


(a) Disconnect the connector from the radio receiver Assy R4 and multi-display M2.

(b) Measure the resistance according to the value(s) in the table below.

Standard:

Tester Connection	Condition	Specified Condition
TXS+ - TX2+	Always	Below 1 $\Omega$
TXS- - TX2-	Always	Below 1 $\Omega$
TXS+ - Body Ground	Always	10 k $\Omega$ or higher
TXS- - Body Ground	Always	10 k $\Omega$ or higher

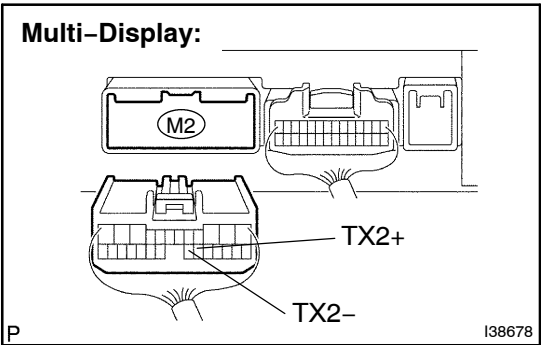

NG REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN DIAGNOSTIC TROUBLE CODE CHART (SEE PAGE 05-1788)