


SYSTEM DIAGRAM

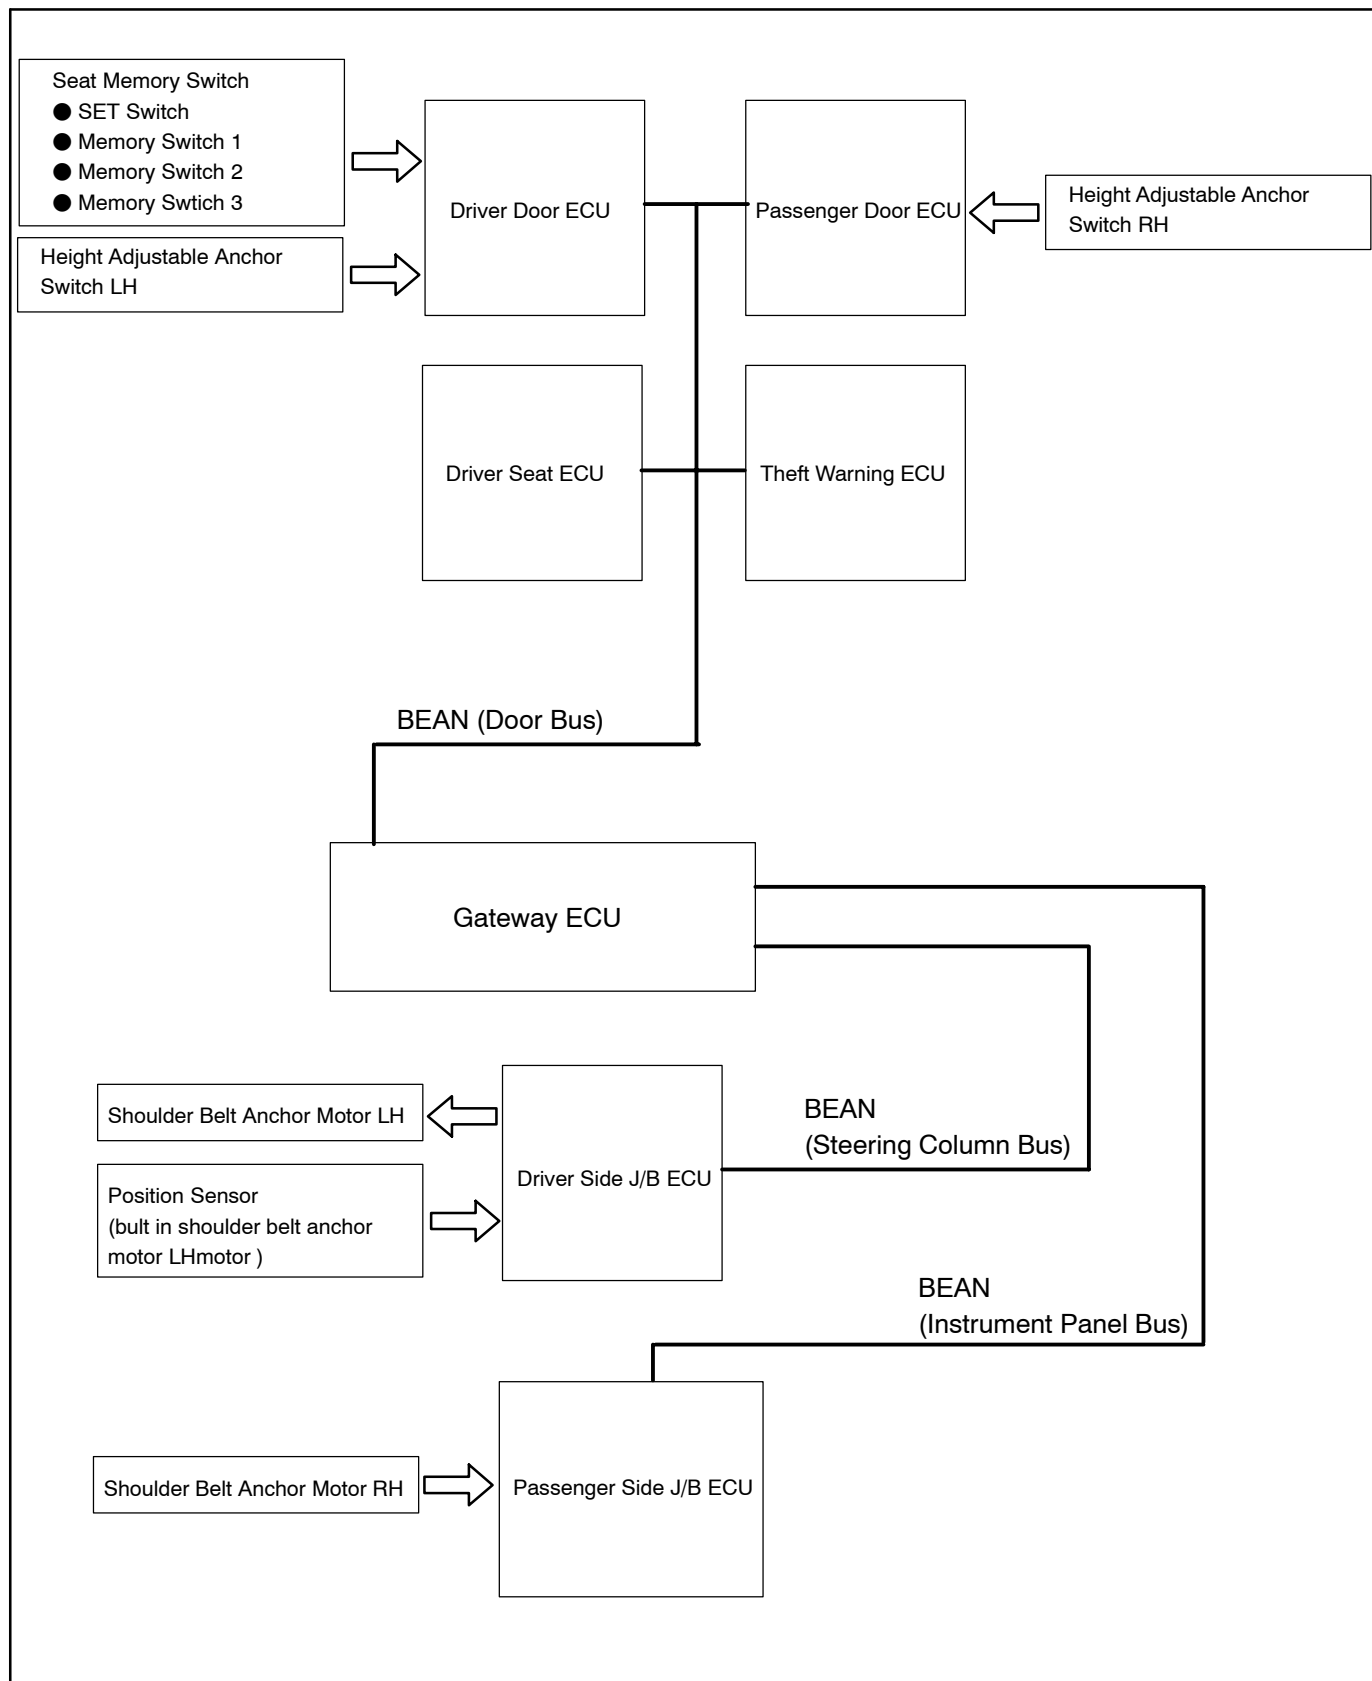

| Sender | Receiver | Signal | Communication Line |
|---------------------|------------------------|--|--------------------|
| Passenger Door ECU | Passenger Side J/B ECU | • Passenger side seat belt adjuster signal | BEAN |
| Driver Side J/B ECU | Driver Seat ECU | <ul style="list-style-type: none"> • Belt anchor position data signal • Belt anchor memory restoration execution signal • Memory data transmission request signal • Belt anchor memory restoration completion signal | BEAN |
| Driver Seat ECU | Driver Side J/B ECU | <ul style="list-style-type: none"> • Memory registration command signal • Memory restoration command signal • Belt anchor restoration permit signal • Belt anchor restoration position signal | BEAN |
| Driver Door ECU | Theft Deterrent ECU | <ul style="list-style-type: none"> • Memory switch SET ON signal • Memory switch M1 ON signal • Memory switch M2 ON signal • Memory switch M3 ON signal | BEAN |
| Driver Door ECU | Driver Seat ECU | • Memory switch signal | BEAN |
| Driver Door ECU | Driver Side J/B ECU | • Seat belt adjuster activation signal | BEAN |