


## REMOVAL

1. REMOVE FRONT WHEEL
2. REMOVE FRONT LEFT FENDER LINER
3. DISCONNECT CONNECTOR

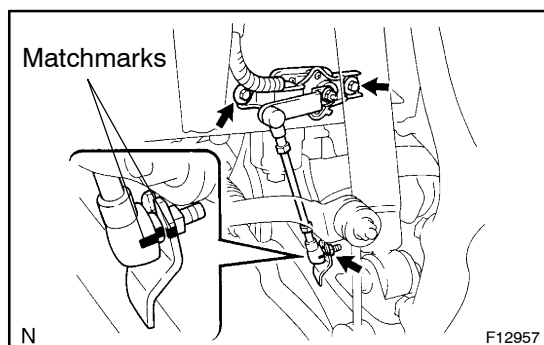

4. REMOVE FRONT HEIGHT CONTROL SENSOR AND  
ACCELERATION SENSOR
  - (a) Place matchmarks on the link and bracket.
  - (b) Remove the nut and disconnect the sensor link.
  - (c) Remove the 2 bolts and height control sensor.