

## REMOVAL

### 1. REMOVE ENGINE ROOM SIDE COVER

### 2. MOVE ASIDE ENGINE ROOM NO. 3 R/B


Remove the 2 bolts and bracket, release the engine room No. 3 R/B.

### 3. REMOVE MASTER CYLINDER (See page BR-18)

### 4. REMOVE NO. 1 UNDER COVER AND NO. 1 SAFETY PAD (See page BO-131)

### 5. REMOVE CLIP AND RETURN SPRING

### 6. REMOVE CLEVIS PIN

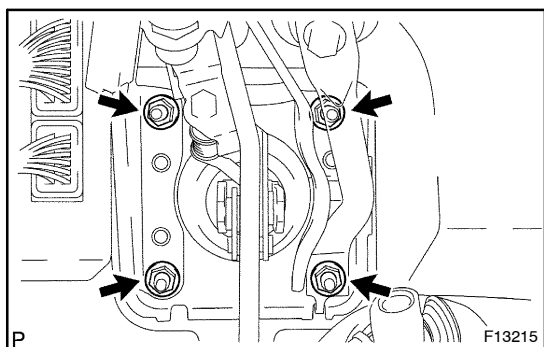

### 7. DISCONNECT VACUUM HOSE FROM BRAKE BOOSTER

### 8. REMOVE BRAKE BOOSTER

- (a) Remove the 4 installation nuts and clevis.
- (b) Pull out the brake booster and gasket.