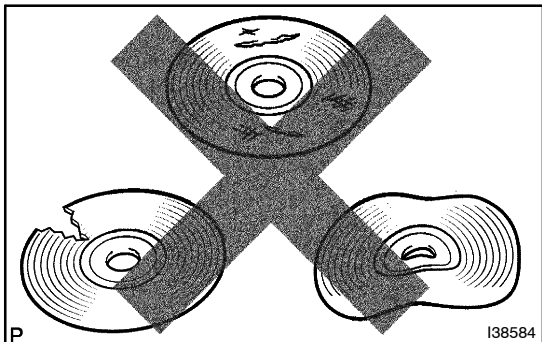
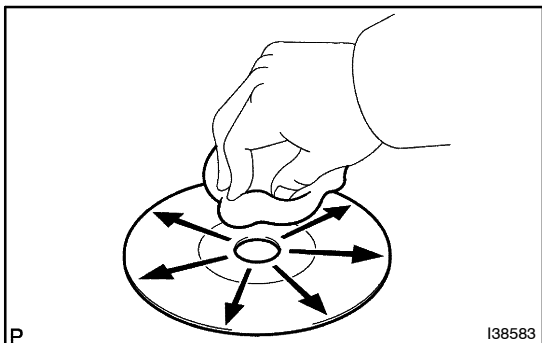


**VOICE IS NOT RECOGNIZED****INSPECTION PROCEDURE****1 CHECK MAP DISC**

- (a) Check that the map disc is not deformed or cracked.  
**OK: No deformations or cracks appear on the map disc.**

**NG****REPLACE MAP DISC****OK****2 CHECK MAP DISC**

- (a) Check for dirt on the map disc surface.  
**OK: No dirt is on the map disc surface.**

**HINT:**

If dirt is on the map disc surface, wipe it with a soft cloth from inside to outside in a radial direction.


**NOTICE:**

**Do not use conventional record cleaner or anti-static preservative.**

**NG****CLEAN THE MAP DISC****OK**

### 3 NAVIGATION CHECK MODE (MICROPHONE CHECK)

(a) Enter the "Microphone Check" mode (see page 05-1760)

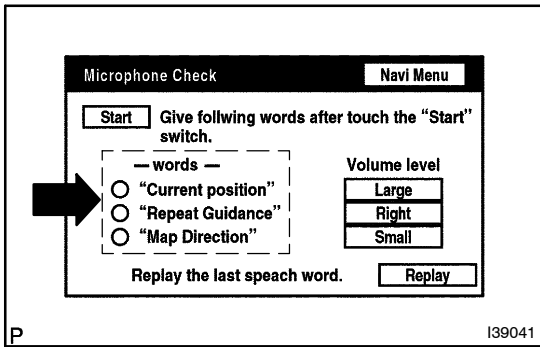

(b) Follow the directions on the screen. Check if the word recognition indicator is displayed in green in each item.

**OK:** All check items are recognized.

NG

**PROCEED TO NEXT CIRCUIT INSPECTION  
SHOWN IN PROBLEM SYMPTOMS TABLE  
(SEE PAGE 05-1771)**

OK

**REPLACE NAVIGATION ECU (SEE PAGE 67-9)**