


DIAGNOSTIC TROUBLE CODE CHART

HINT:

While the climate control seat is operated, if the indicator of the climate control switch blinks in any of the patterns shown in the illustration, the climate control ECU will enter fail-safe mode.

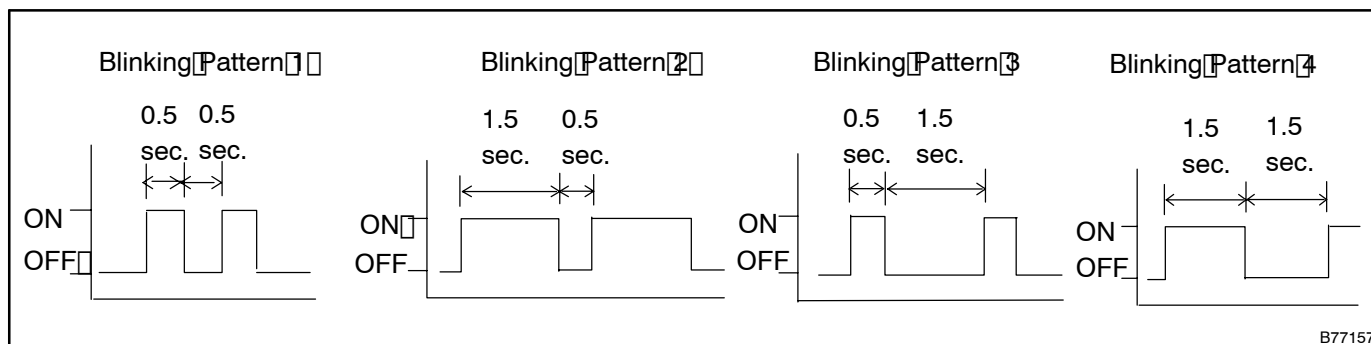

HINT:

After identifying the blinking pattern, troubleshoot according to the flow chart below.

DTC (See Page)	Diagnosis	Symptoms	Countermeasure
Blinking pattern 1 (05-2458)	<ul style="list-style-type: none"> • Seat climate controller excess current • Fan motor excess current • Seat heater excess current (only to rear seat) 	Climate control does not operate	Turn climate control switch OFF and ON.
Blinking pattern 2 (05-2468)	Open or short in climate control switch circuit	Climate control does not operate	<ul style="list-style-type: none"> • Turn ignition switch OFF and ON. (front seat) • Turn climate control switch OFF. (rear seat)
Blinking pattern 3 (05-2473)	<ul style="list-style-type: none"> • Open thermistor circuit • Open climate control switch circuit 	Climate control does not operate	<ul style="list-style-type: none"> • Turn ignition switch OFF and ON. (front seat) • Turn climate control switch ON and OFF.
Blinking pattern 4 (05-2484)	Open or short climate control circuit	Climate control does not operate	Turn climate switch OFF and ON.