


## INSPECTION

### 1. INSPECT ULTRASONIC SENSOR

| Tester connection | Condition | Specified condition |
|-------------------|-----------|---------------------|
| 1 - 2             | Constant  | 10KΩ ± 2KΩ          |


If resistance is not as specified, replace ultrasonic sensor.

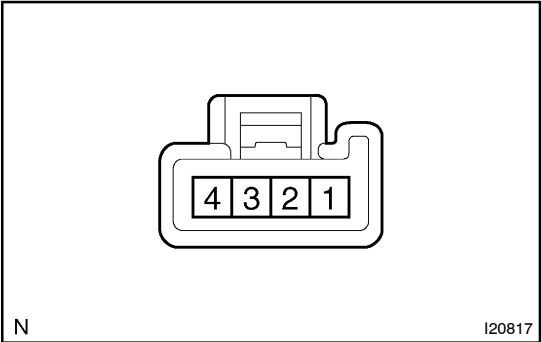

### 2. INSPECT ULTRASONIC SENSOR SWITCH CONTINUITY

| Switch position | Condition | Specified condition |
|-----------------|-----------|---------------------|
| ON              | 3 - 4     | No continuity       |
| OFF             | 3 - 4     | Continuity          |

If resistance is not as specified, replace the switch.

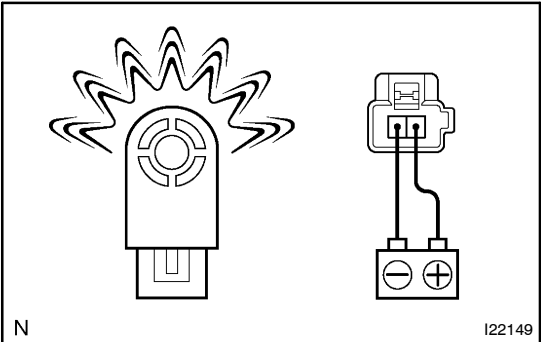

### 3. INSPECT ULTRASONIC SENSOR

Connect the positive (+) lead from the battery to terminal 1 and the negative (-) lead to terminal 2, and check that the buzzer sounds.