


# VEHICLE LIFT AND SUPPORT LOCATIONS

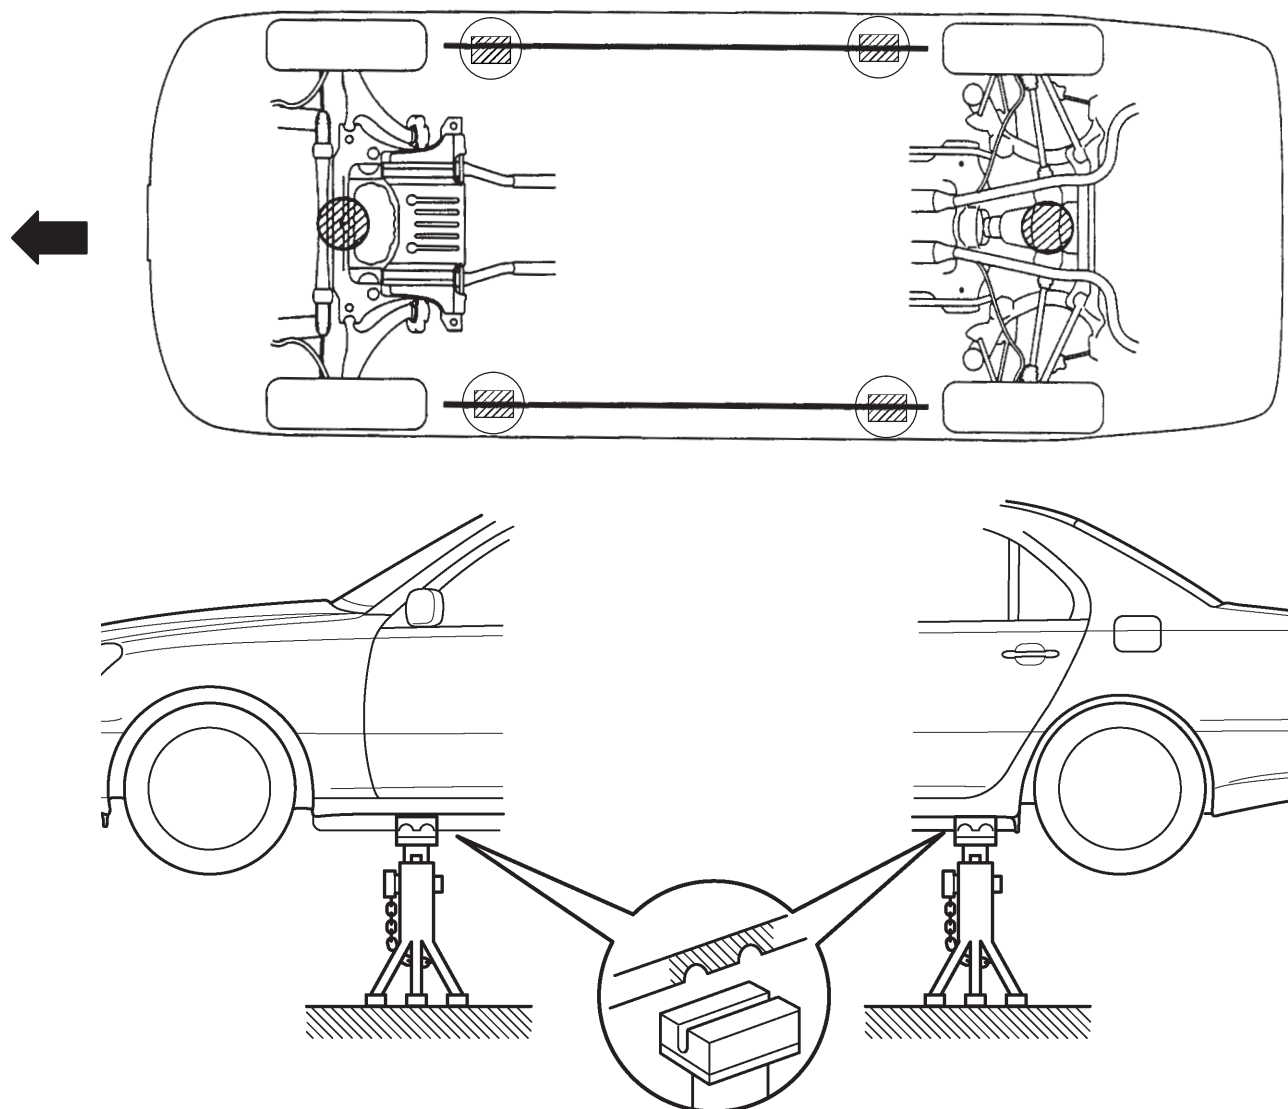

## JACK POSITION

Front - - - - - Front frame  
Rear - - - - - Rear suspension member

### CAUTION :


When jacking up the front and rear, make sure the vehicle is not carrying any extra weight.

## PANTOGRAPH JACK POSITION

### SUPPORT POSITION

Safety stand and swing arm type lift - - - - -

## Plate Type Lift

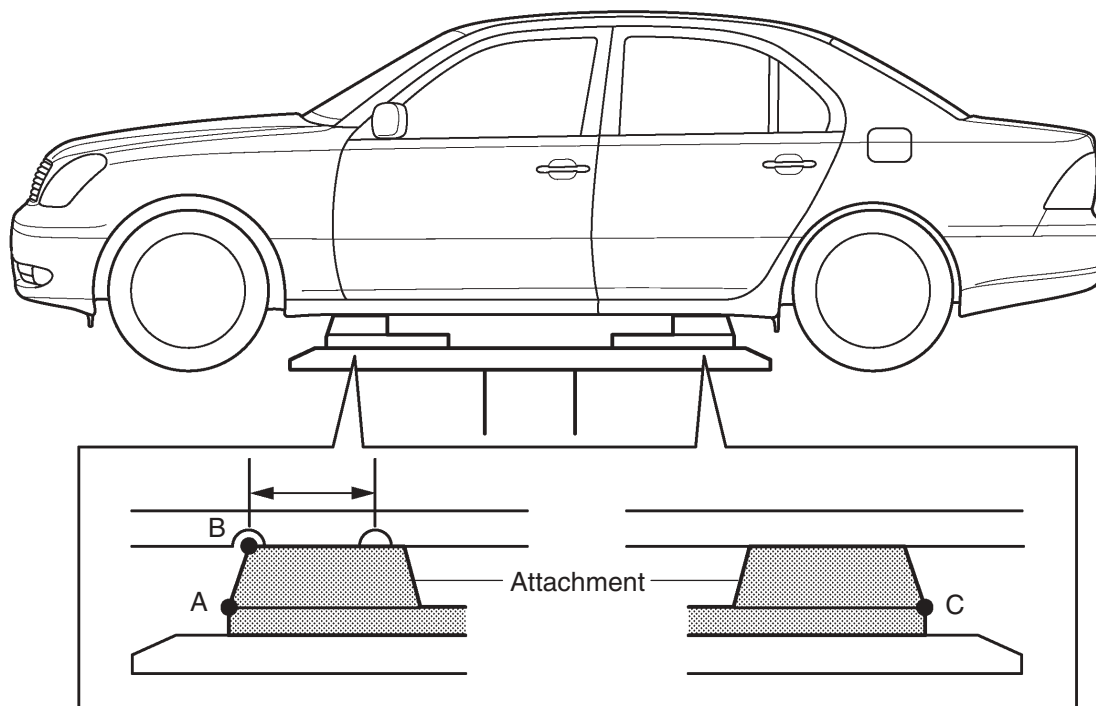

### NOTICE :

Do not set an attachment onto any areas other than area (C) of the body rocker panel moulding indicated in the illustration.

### HINT:

Left and right set position

Front and rear set position

Place the vehicle over the center of the lift.

- Place the attachments at the ends of the rubber plate surface, under the vehicle lift pad (A and C in the illustration)
- Raise the plate slightly and reposition the car so the top of the attachment (B in the illustration) is aligned with the front side notch in the vehicle rocker flange.

### Attachment dimensions

