


REMOVAL

1. **REMOVE FRONT AXLE HUB** (See page SA-12)

2. **REMOVE STEERING KNUCKLE**

(a) Remove the clip and nut.

Torque: 87 N·m (885 kgf·cm, 64 ft·lbf)

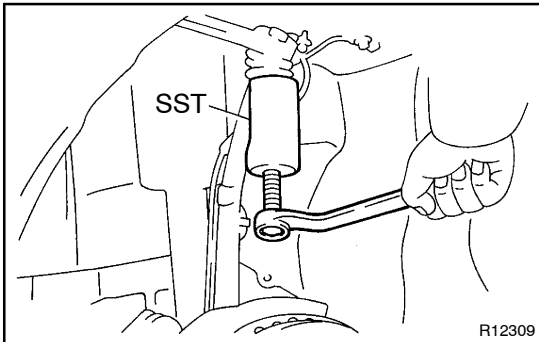

(b) Using SST, disconnect the steering knuckle and remove it from the upper ball joint.

SST 09610-20012

(c) Remove the 2 bolts and steering knuckle from the lower ball joint.

Torque: 113 N·m (1,150 kgf·cm, 83 ft·lbf)