


DTC CHECK/CLEAR

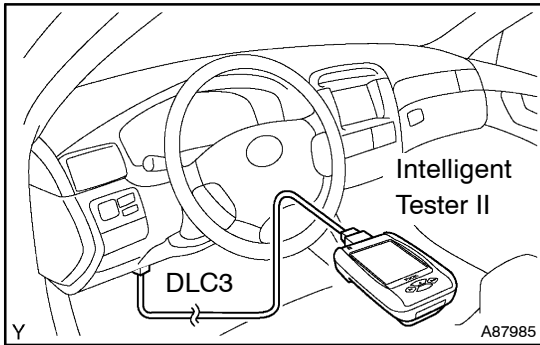

1. CHECK DTC

- Connect the tester to the DLC3.
- Turn the ignition switch ON.
- Read DTCs by following the prompts on the tester screen.

HINT:

Refer to the tester operator's manual for further details.

2. CLEAR DTC

- Connect the tester to the DLC3.
- Turn the ignition switch ON.
- Erase the DTCs following the prompts on the tester screen.

HINT:

Refer to the tester operator's manual for further details.