



ON-VEHICLE INSPECTION

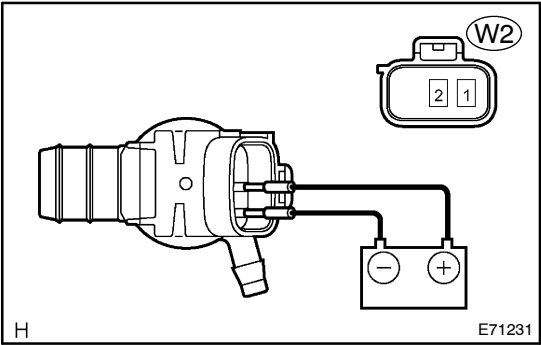


1. WINDSHIELD WASHER MOTOR AND PUMP ASSY

- (a) Operation Check
- (1) Fill the washer jar with washer fluid.
  - (2) Connect the positive battery (+) lead to terminal 2 of the windshield washer motor and pump assy, and the negative battery (-) lead to terminal 1. Check that washer fluid flows from the washer jar.

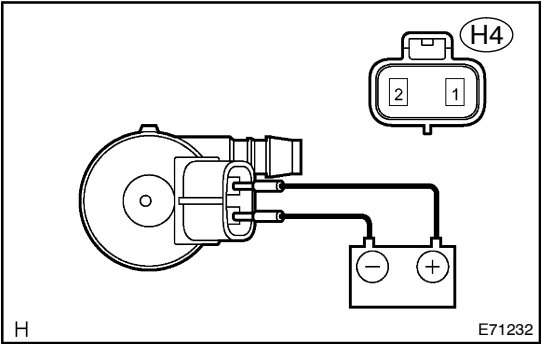

2. HEADLAMP CLEANER MOTOR AND PUMP ASSY

- (a) Operation Check
- (1) Fill the washer jar with washer fluid.
  - (2) Connect the positive battery (+) lead to terminal 1 of the headlamp cleaner motor and pump assy, and the negative battery (-) lead to terminal 2. Check that washer fluid flows from the washer jar.

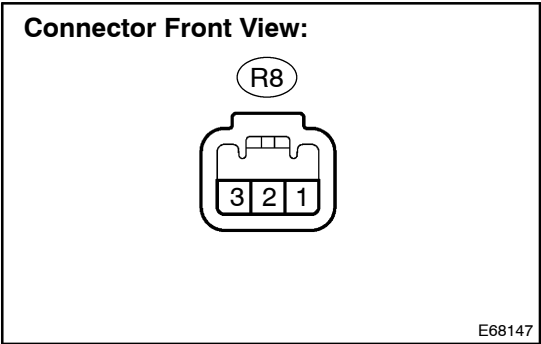

3. RAIN SENSOR

- (a) Measure the voltage according the value(s) in the table below.

Standard:

Tester connection	Condition	Specified voltage
1 – 3	Ignition switch ON	10 to 14 V
2 – 3	Ignition switch ON	Signal waveform