


THERMISTOR INSPECTION

1. REMOVE INSTRUMENT PANEL AND REINFORCEMENT (See page BO-131)
2. RHD models:
REMOVE BLOWER UNIT

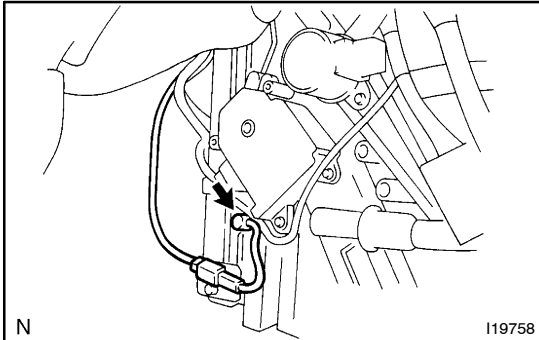


3. REMOVE THERMISTOR

- (a) Disconnect the connector clamp.
- (b) Using a screwdriver, remove the thermistor.

HINT:

Tap the screwdriver tip before use.

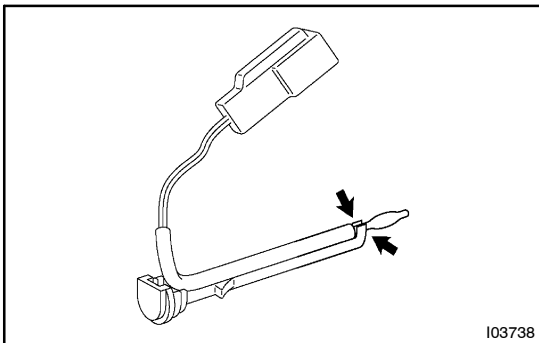

- (c) Release the 2 claws and remove the sensor from bracket plate.

4. INSPECT THERMISTOR (See page DI-1781)
5. INSTALL THERMISTOR