


INSTALLATION

1. INSTALL ALTERNATOR

- (a) Install the alternator and wire bracket with the bolt and 2 nuts.


Torque: 39 N·m (400 kgf·cm, 29 ft·lbf)

- (b) Install the cord clip to the alternator with the bolt.
- (c) Connect the alternator wire and install the rubber cap with the nut.
- (d) Connect the alternator connector.

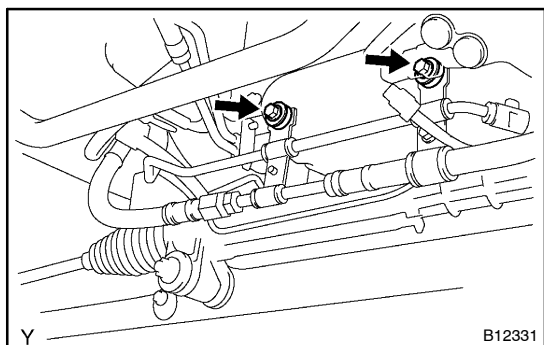

2. CONNECT PS OIL COOLER PIPE TO OIL PAN

Connect the 2 PS oil cooler pipes to the oil pan with the 2 bolts and 2 screws.

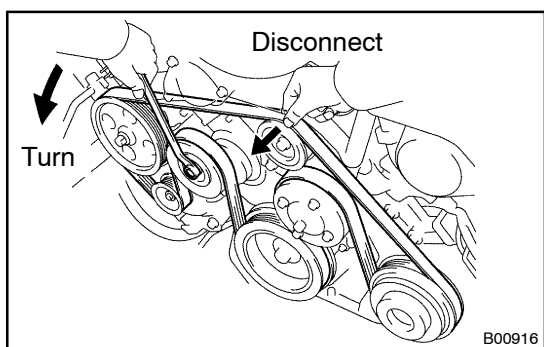

3. INSTALL DRIVE BELT

Install the drive belt by turning the drive belt tension counter-clockwise.

HINT:

The tension pulley bolt has a left-hand thread.

4. **INSTALL V-BANK COVER AND ENGINE ROOM SIDE COVER RH**
5. **INSTALL ENGINE UNDER COVER**