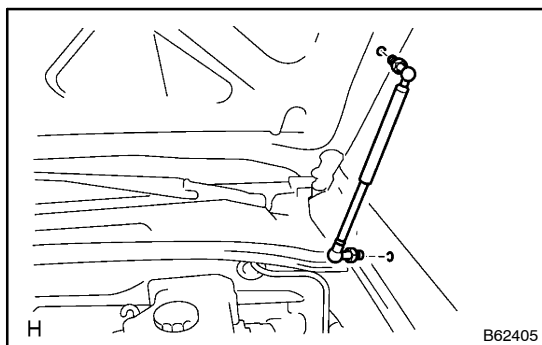


HOOD SUPPORT REPLACEMENT

750S7-01

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.
- A bolt without a torque specification is a standard bolt (see page 03-2).

**1. REMOVE HOOD SUPPORT ASSY LH**

- (a) Remove the 2 bolts and hood support.

HINT:

Remove the hood support while supporting the hood panel with your hands.

2. INSTALL HOOD SUPPORT ASSY LH

- (a) Install the hood support with the 4 bolts.

Torque: 22 N·m (225 kgf·cm, 19 ft·lbf)