


# REAR SPEAKER ASSY NO.2

## REPLACEMENT

6714B-01

### HINT:

- COMPONENTS: [SEE PAGE 75-28.](#)
  - LOCATION: [SEE PAGE 67-2.](#)
  - Installation is in the reverse order of removal.
  - The procedure for the left side is the same as that for the right side. The procedure for right side is shown below.
1. REMOVE SIDE TRIM BOARD COVER FRONT RH ([SEE PAGE 75-32](#))
  2. REMOVE SIDE REAR CURTAIN ASSY RH (W/ REAR CURTAIN SUB-ASSY) ([SEE PAGE 75-32](#))
  3. REMOVE POWER WINDOW REGULATOR SWITCH ASSY REAR ([SEE PAGE 75-32](#))
  4. REMOVE REAR DOOR INSIDE HANDLE BEZEL RH ([SEE PAGE 75-32](#))
  5. REMOVE REAR DOOR TRIM BOARD SUB-ASSY RH ([SEE PAGE 75-32](#))

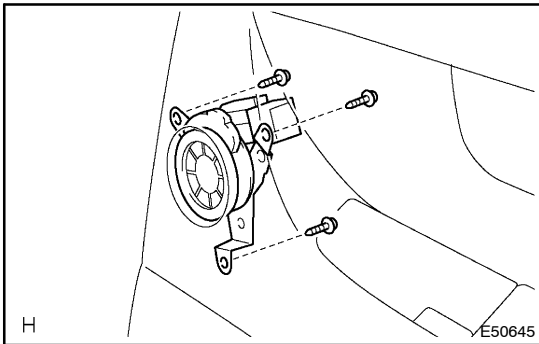

6. REMOVE REAR SPEAKER ASSY NO.2
  - (a) Disconnect the connector.
  - (b) Remove the 3 screws and rear speaker assy No.2.