


SYSTEM DIAGRAM

1. REAR POWER SEAT


(a) w/o Memory

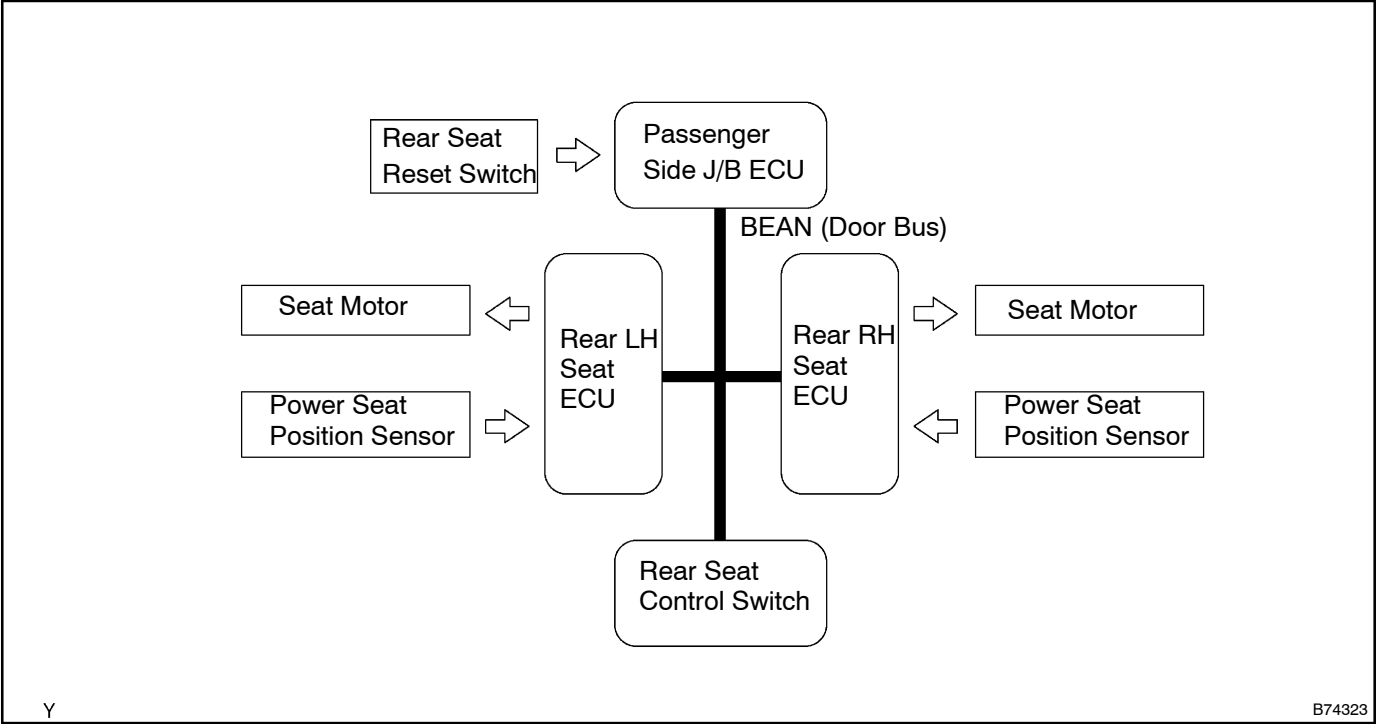

Communication Table

Sender	Receiver	Signal	Line
Passenger Side J/B ECU	Rear LH Seat ECU	Rear seat return switch signal	BEAN
Passenger Side J/B ECU	Rear RH Seat ECU	Rear seat return switch signal	BEAN
Rear Seat Control Switch	Rear LH Seat ECU	RL seat activation command signal	BEAN
Rear Seat Control Switch	Rear LH Seat ECU	RL seat activation command signal	BEAN

(b) w/ Memory

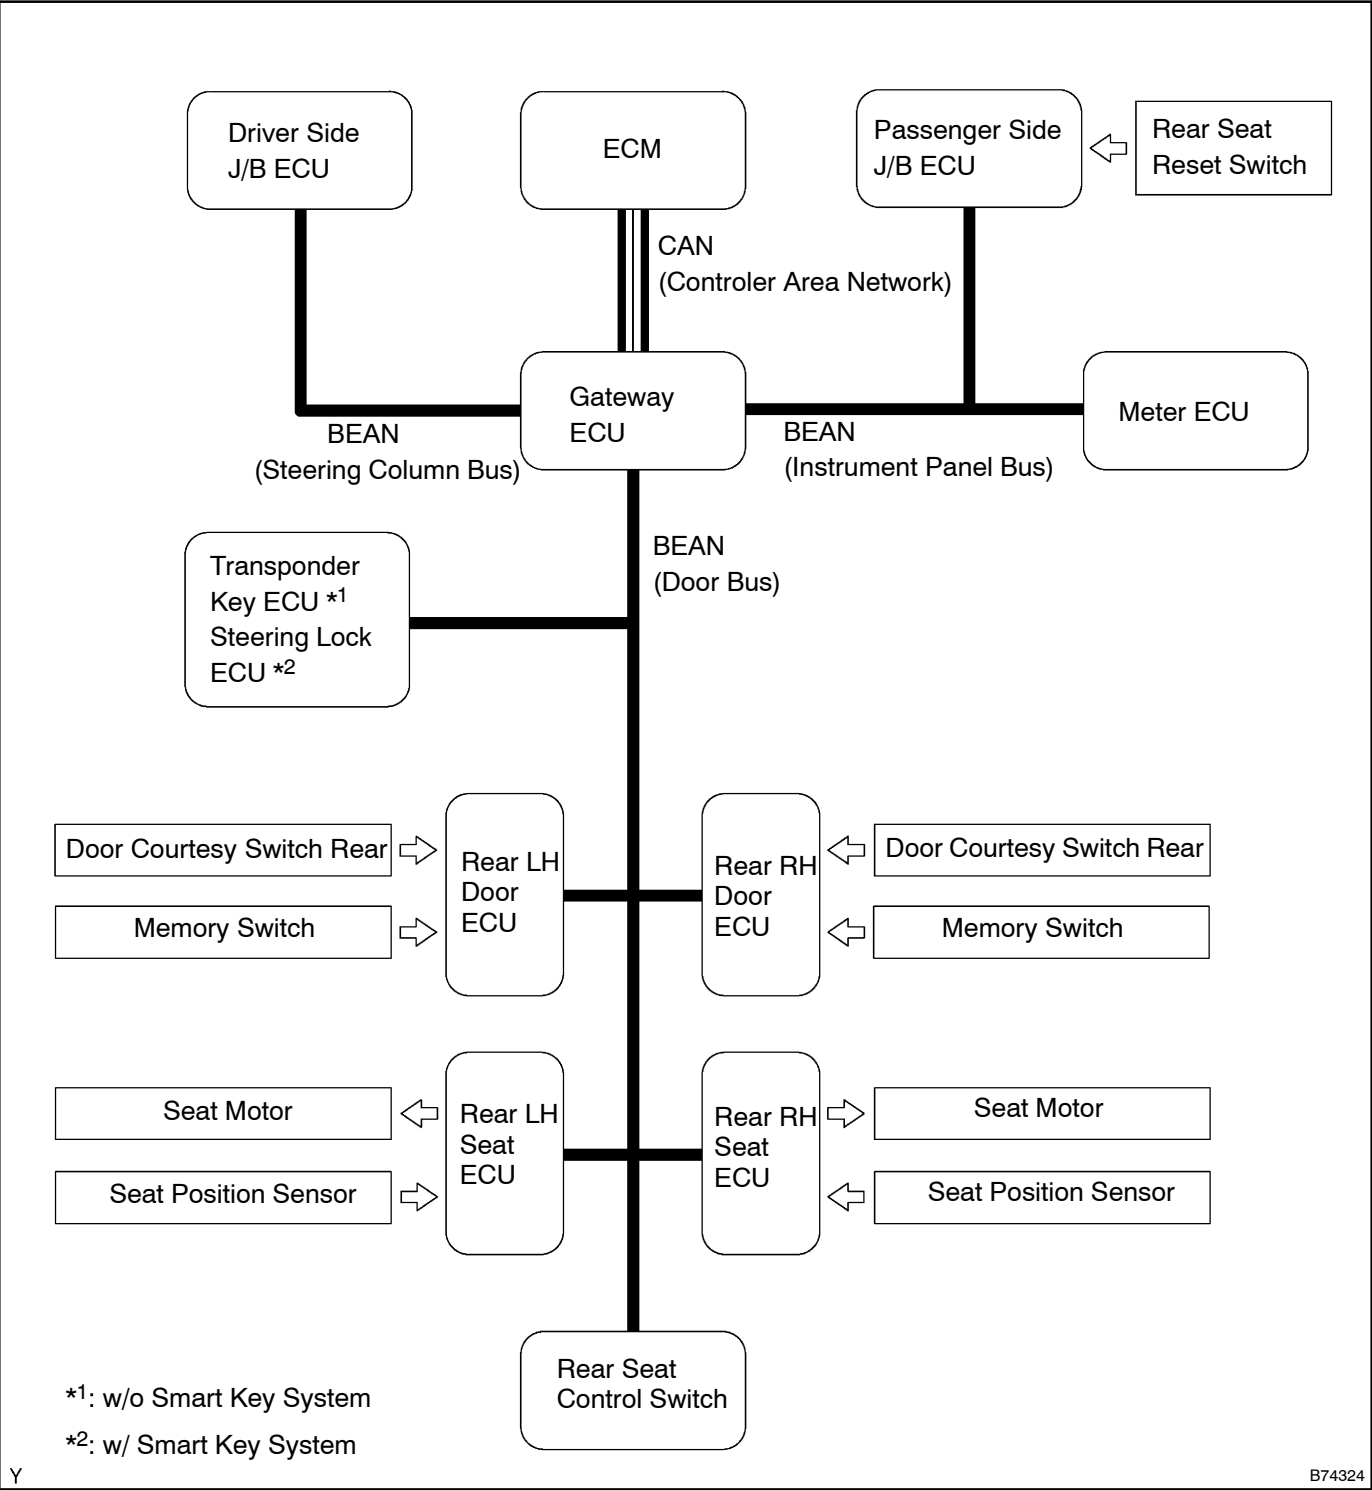

Communication Table


Sender	Receiver	Signal	Line
Rear LH Seat ECU	Rear LH Door ECU	RL seat cancel signal	BEAN
Rear LH Seat ECU	Rear RH Door ECU	RL seat cancel signal	BEAN
Rear LH Seat ECU	Rear Seat Control Switch	RL seat cancel signal	BEAN
Rear RH Seat ECU	Rear LH Door ECU	RR seat cancel signal	BEAN
Rear RH Seat ECU	Rear RH Door ECU	RR seat cancel signal	BEAN
Rear RH Seat ECU	Rear Seat Control Switch	RR seat cancel signal	BEAN
Rear LH Door ECU	Rear LH Seat ECU	RL door courtesy switch signal	BEAN
		RL seat memory switch SET ON signal	BEAN
		RL seat memory switch M ON signal	BEAN
		RL seat memory switch C ON signal	BEAN
Rear LH Door ECU	Rear RH Seat ECU	RL door courtesy switch signal	BEAN
Rear RH Door ECU	Rear RH Seat ECU	RR door courtesy switch signal	BEAN
		RR seat memory switch SET ON signal	BEAN
		RR seat memory switch M ON signal	BEAN
		RR seat memory switch C ON signal	BEAN
Rear RH Door ECU	Rear LH Seat ECU	RR door courtesy switch signal	BEAN
Rear Seat Control Switch	Rear LH Seat ECU	RL seat activation command signal	BEAN
Rear Seat Control Switch	Rear RH Seat ECU	RR seat activation command signal	BEAN
Transponder Key ECU*1 Steering Lock ECU*2	Rear LH Seat ECU	Ignition switch signal	BEAN
Transponder Key ECU*1 Steering Lock ECU*2	Rear RH Seat ECU	Ignition switch signal	BEAN
Driver Side J/B ECU	Rear LH Seat ECU	Stoplamp illumination command signal	BEAN
Driver Side J/B ECU	Rear RH Seat ECU	Stoplamp illumination command signal	BEAN
Passenger Side J/B ECU	Rear LH Seat ECU	Rear seat return switch signal	BEAN
Passenger Side J/B ECU	Rear RH Seat ECU	Rear seat return switch signal	BEAN
Meter ECU	Rear LH Seat ECU	Vehicle speed signal	BEAN
Meter ECU	Rear RH Seat ECU	Vehicle speed signal	BEAN
ECM	Rear LH Seat ECU	Shift position P signal	CAN, BEAN
ECM	Rear RH Seat ECU	Shift position P signal	CAN, BEAN

HINT:

*1: w/o Smart key system

*2: w/ Smart key system

2. SEAT VIBRATOR

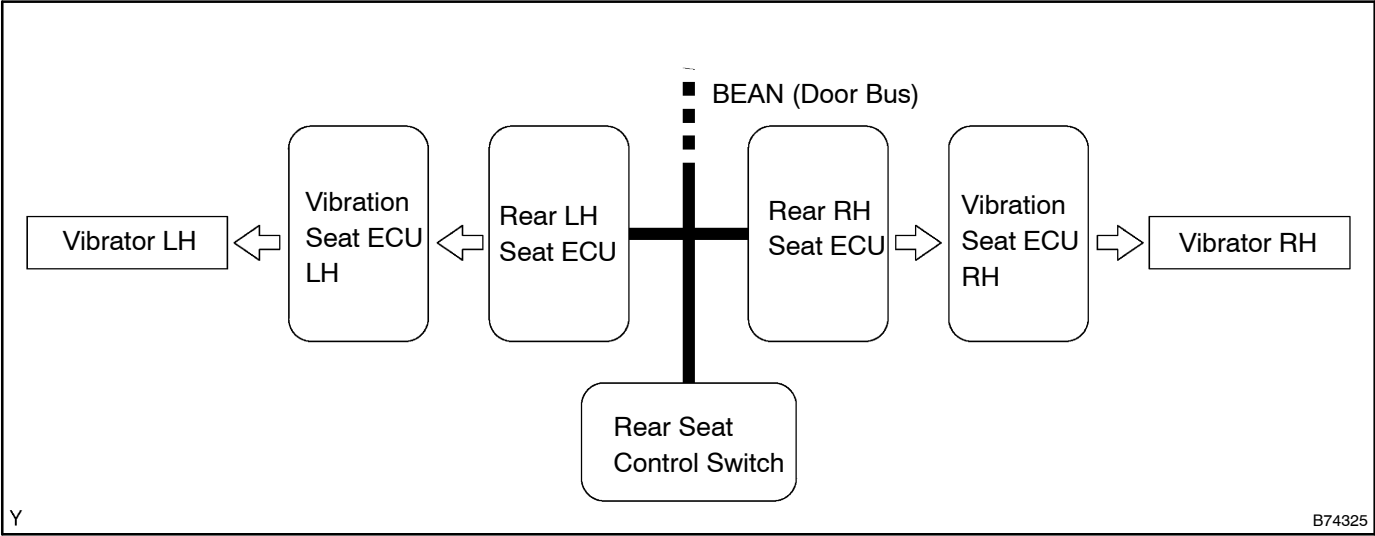

Communication Table

Sender	Receiver	Signal	Line
Rear Seat Control Switch	Rear LH Seat ECU	RL seat activation command signal	BEAN
Rear Seat Control Switch	Rear LH Seat ECU	RL seat activation command signal	BEAN