

## VOICE RECOGNITION DIFFICULTY

### INSPECTION PROCEDURE

#### 1 CHECK CONDITION

- (a) Check if the system's voice recognition level is low with only one particular voice.


**OK: The system's voice recognition level is low with any voice.**

NG

**SYSTEM'S VOICE RECOGNITION LEVEL VARIES DEPENDING ON VOICE AND PRONUNCIATION. THIS IS NOT A MALFUNCTION**

OK

#### 2 CHECK MAP DISC

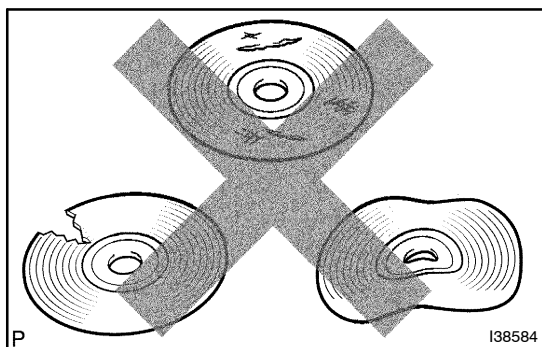

- (a) Check that the map disc is not deformed or cracked.


**OK: No deformations or cracks appear on the map disc.**

NG

**REPLACE MAP DISC**

OK

#### 3 CHECK MAP DISC

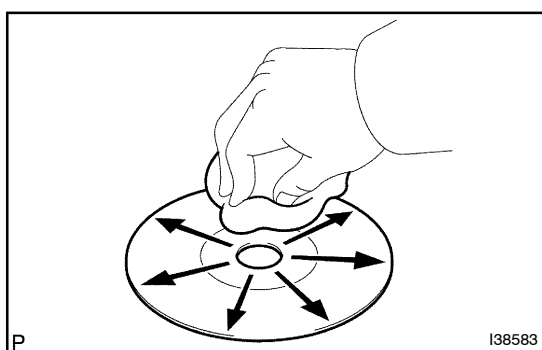

- (a) Check for dirt on the map disc surface.

**OK: No dirt is on the map disc surface.**

**HINT:**

If dirt is on the map disc surface, wipe it with a soft cloth from inside to outside in a radial direction.

**NOTICE:**

**Do not use conventional record cleaner or anti-static preservative.**


NG

**CLEAN THE MAP DISC**

OK

## 4 NAVIGATION CHECK MODE (MICROPHONE CHECK)

(a) Enter the "Microphone Check" mode (see page 05-1760)

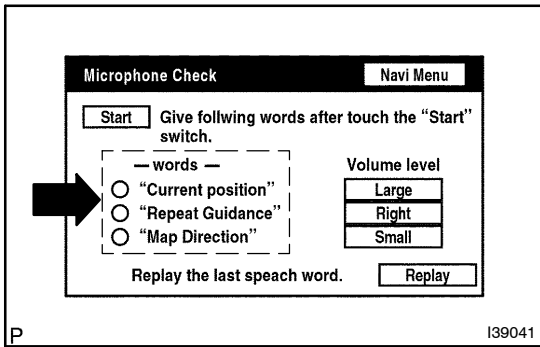

(b) Follow the directions on the screen. Check if the word recognition indicator is displayed in green in each item.

**OK:** All check items are recognized.

**NG**

**PROCEED TO NEXT CIRCUIT INSPECTION  
SHOWN IN PROBLEM SYMPTOMS TABLE  
(SEE PAGE 05-1771)**

**OK**

**NORMAL OPERATION**