


LOCATION

FL Block Assy*4

- D/C CUT Fuse
- D-J/B H-fuse
- ALT H-fuse

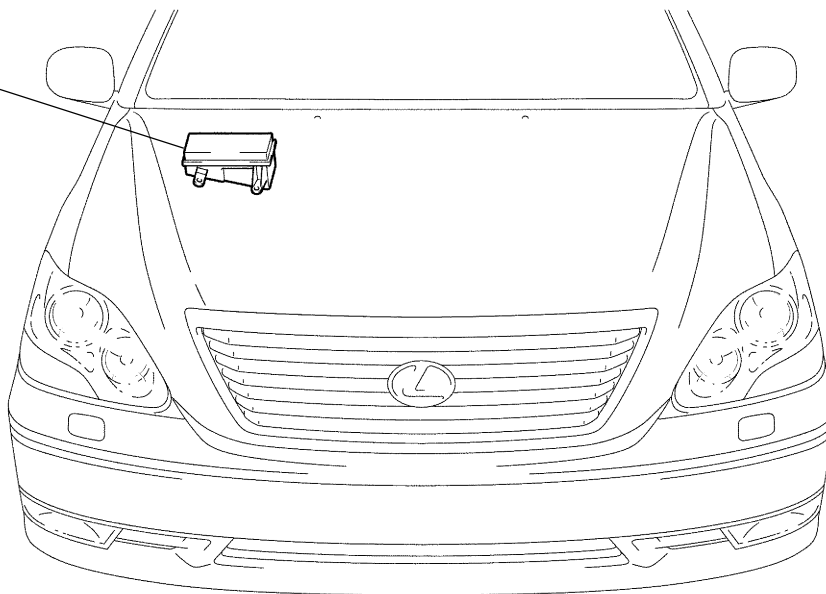

Combination Meter*4

- Seat Belt Warning Lamp (for Driver)
- Seat Belt Warning Buzzer (for Driver)*3

Clock*1

Multi-display*2

- Seat Belt Warning Lamp (for Front Passenger)

Passenger Side J/B*4


- MPX-B3 Fuse

Driver Side J/B*4

- Driver Side J/B ECU
- AM1 Fuse
- MPX-IG Fuse
- D-IG1 Relay

Occupant
Detection
Sensor*4

(for Front Passenger)

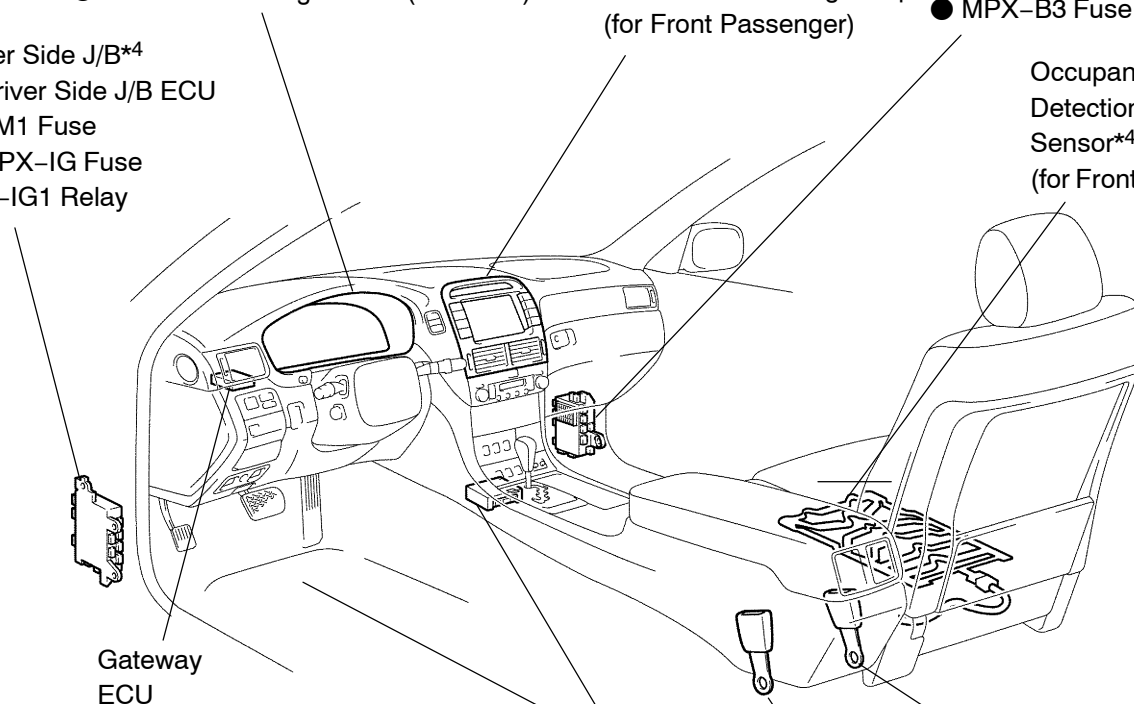

Gateway
ECU

Airbag Sensor
Assembly*4

Buckle Switch Front RH

Buckle Switch Front LH

*1: w/o LEXUS Navigation System

*2: w/ LEXUS Navigation System

*3: G.C.C. Countries

*4: For RHD vehicles, look at the same location
on the opposite side of the vehicle.