


OUTER REAR VIEW MIRROR ASSY REPLACEMENT

7011J-01


HINT:

- The installation procedures are the removal procedures in reverse order. However, only installation procedures requiring additional information are included.
 - Use the same procedures for the RH side and LH side.
 - The procedures listed below are for the LH side.
 - A bolt without a torque specification is shown in the standard bolt chart (see page 03-2).
1. REMOVE DOOR INSIDE HANDLE BEZEL NO.2 LH (See page 75-17)
 2. REMOVE FRONT ARMREST BASE PANEL UPPER LH (See page 75-17)
 3. REMOVE REAR DOOR TRIM BOARD SUB-ASSY LH (See page 75-17)
 4. REMOVE DOOR FRAME GARNISH LH (See page 75-17)

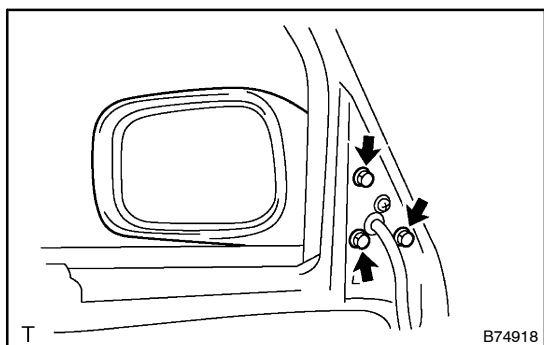


5. REMOVE OUTER REAR VIEW MIRROR ASSY

- (a) Disconnect the connector.
- (b) Remove the 3 bolts and mirror.

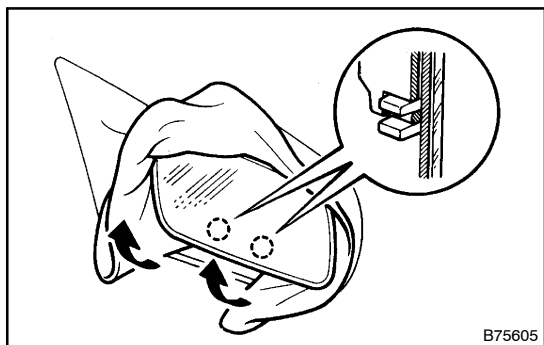


6. REMOVE OUTER MIRROR COVER


- (a) Insert the shop rag between the mirror and the mirror body. Wrap the mirror in the shop rag.
- (b) Pull up the lower side of the shop rag to disconnect the mirror joint.

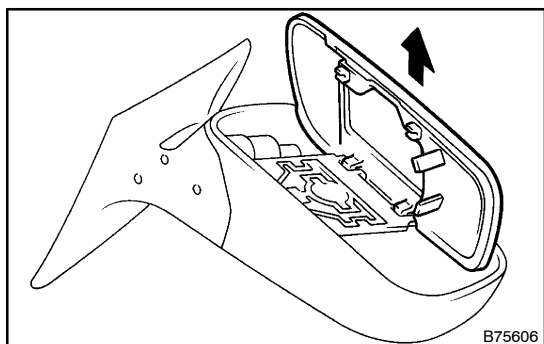


- (c) Pull up the mirror and disconnect it.

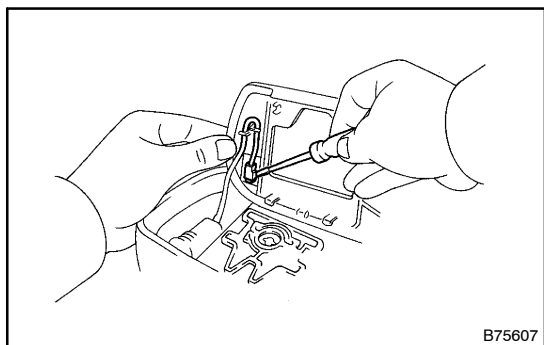


(d) Disconnect the connector.

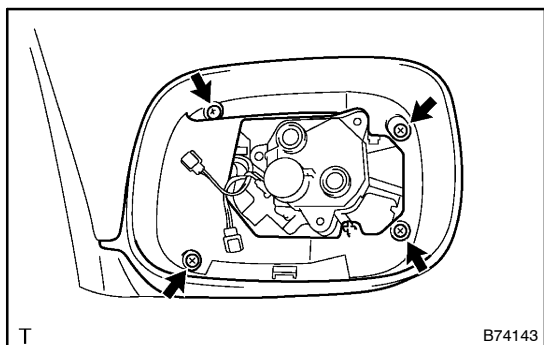


(e) Remove the 4 screws and mirror cover.

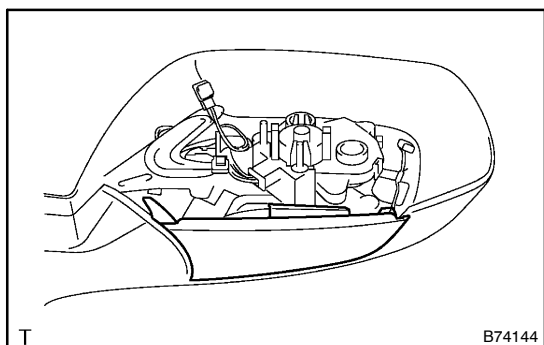

(f) Remove the mirror lamp.

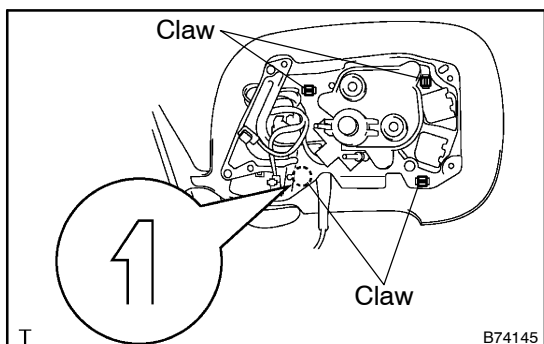

(g) Using a screwdriver, disengage the 4 claws and remove the back-mirror cover.

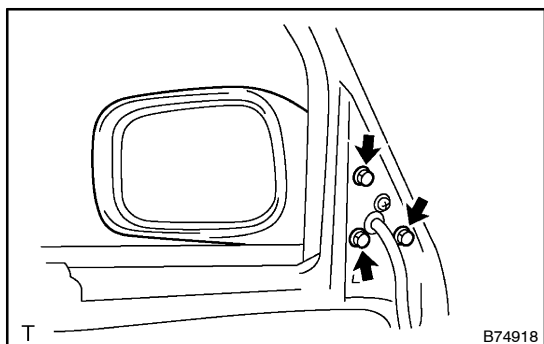

7. INSTALL OUTER REAR VIEW MIRROR ASSY

(a) Install the mirror with the 3 bolts.

Torque: 5.5 N·m (56 kgf·cm, 49 in·lbf)