


## REMOVAL

1. REMOVE LEVEL GAUGE
2. RAISE VEHICLE

### NOTICE:

Make sure that the vehicle is securely supported.

3. REMOVE ENGINE UNDER COVER
4. REMOVE FRONT SUSPENSION PROTECTOR

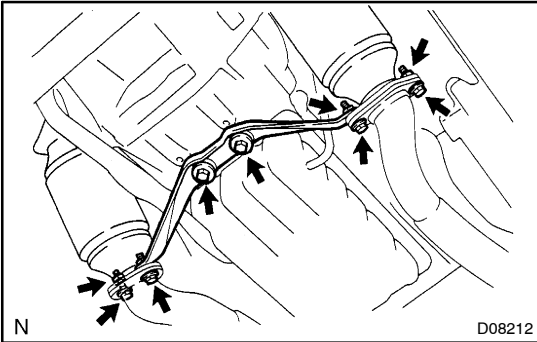

### 5. REMOVE EXHAUST PIPE

- (a) Disconnect the 2 heated oxygen sensors.

**Torque: 44 N·m (450 kgf·cm, 32 ft·lbf)**

#### HINT:

At the time of installation, please refer to the following items.

- Before installing the heated oxygen sensor, twist the sensor wire counterclockwise 3 and 1/2 turns.
- After installing the heated oxygen sensor wire is not twisted. If it is twisted, remove the heated oxygen sensor and reinstall it.

- (b) Remove the 4 bolts, nuts and 2 gaskets from the LH and RH front TWC (unleaded gasoline) or 2 sub-mufflers (leaded gasoline).

**Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)**


#### HINT:

At the time of installation, please refer to the following item.

Replace the used nuts and gaskets with new ones.

- (c) Remove the 2 bolts and support bracket.


**Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)**

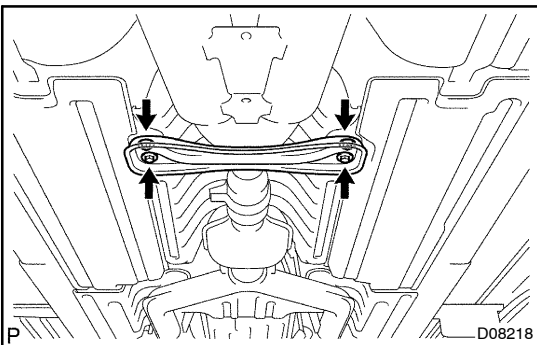

- (d) Remove the 4 bolts and center floor crossmember brace.

**Torque: 13 N·m (130 kgf·cm, 9 ft·lbf)**

- (e) Remove the exhaust pipe.

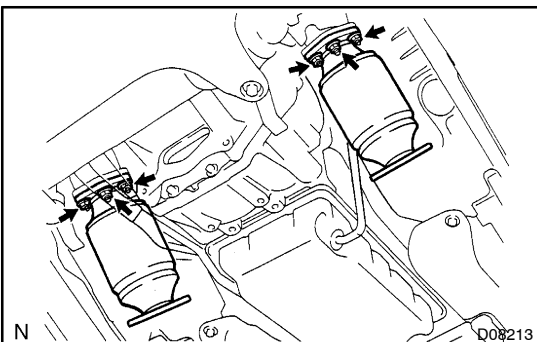

### 6. REMOVE LH AND RH FRONT TWC (unleaded gasoline) OR SUB-MUFFLERS (leaded gasoline)


Remove the 6 nuts, 2 gaskets, LH and RH front TWC (unleaded gasoline) or 2 sub-mufflers (leaded gasoline).

**Torque: 62 N·m (630 kgf·cm, 46 ft·lbf)**

#### HINT:

At the time of installation, please refer to the following item.

Replace the used nuts and gaskets with new ones.

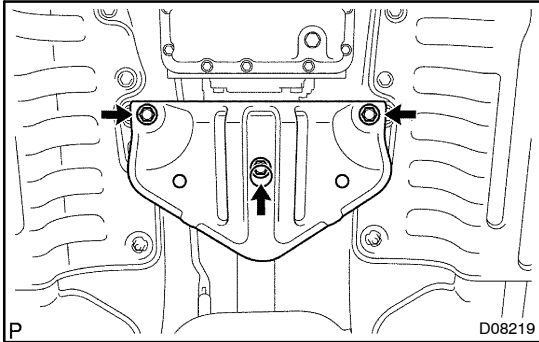

## 7. REMOVE ENGINE REAR MOUNTING MEMBER BRACKET PLATE


Remove the 3 bolts and bracket plate.

**Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)**

## 8. REMOVE 2 BOLTS AND FILLER PIPE

HINT:


At the time of installation, please refer to the following item.  
Replace the used O-ring with a new one.

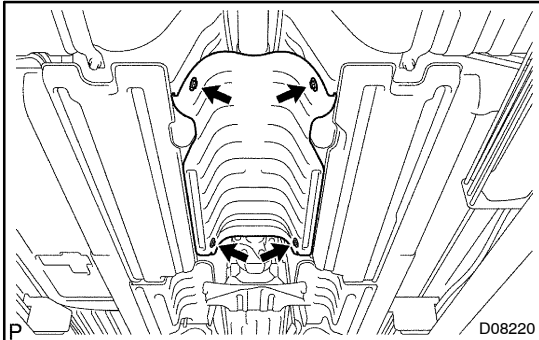

## 9. REMOVE HEAT INSULATOR

Remove the 4 bolts and heat insulator.

**Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)**

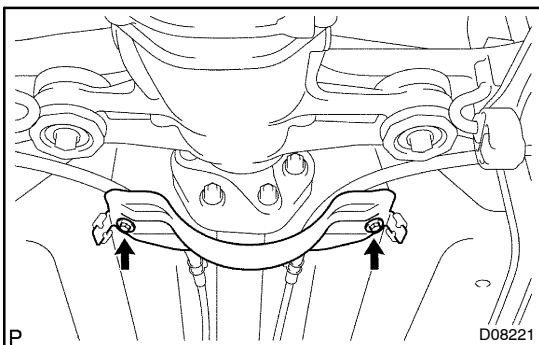


## 10. REMOVE PROPELLER SHAFT HEAT INSULATOR

Remove the 2 bolts and propeller shaft heat insulator.

**Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)**

## 11. REMOVE PROPELLER SHAFT


(See page PR-3)

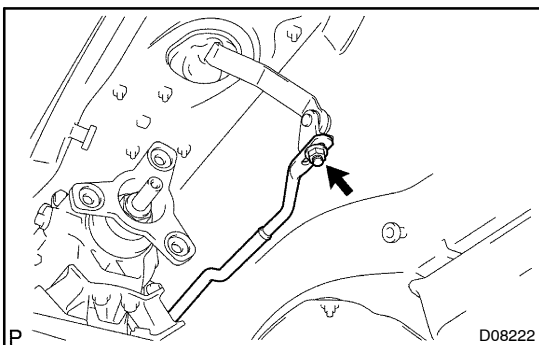

## 12. REMOVE SHIFT CONTROL ROD

Remove the nut and disconnect the rod.

**Torque: 13 N·m (130 kgf·cm, 9 ft·lbf)**

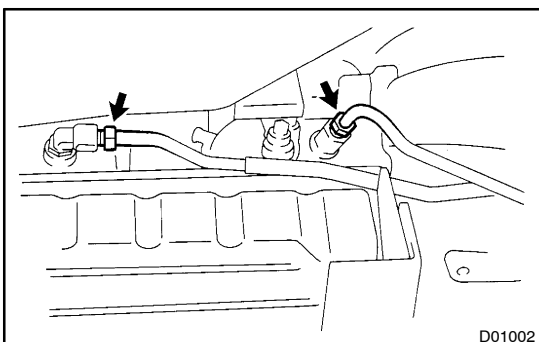


## 13. DISCONNECT OIL COOLER PIPE

(a) Loosen the 2 union nuts from the transmission.


**Torque: 44 N·m (450 kgf·cm, 32 ft·lbf)**

**NOTICE:**

Be careful not to damage the oil cooler pipe.

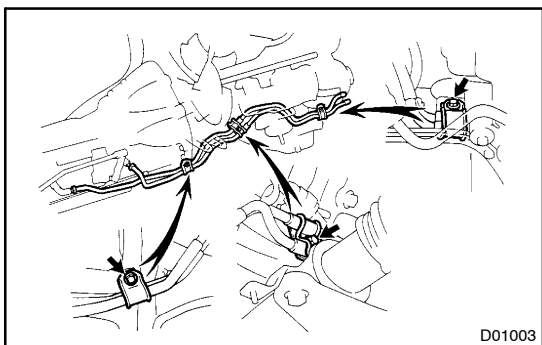


- (b) Disconnect the 3 set bolts of the clamp.  
**Torque: 4.9 N·m (50 kgf·cm, 43 in·lbf)**
- (c) Disconnect the 2 oil cooler pipes from the transmission.

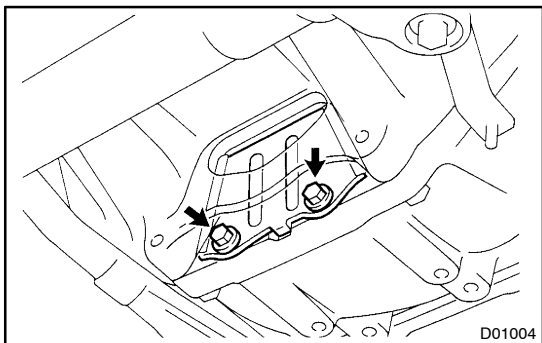

#### 14. REMOVE TORQUE CONVERTER MOUNTING BOLT

- (a) Remove the 2 bolts and flywheel housing under cover.  
**Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)**

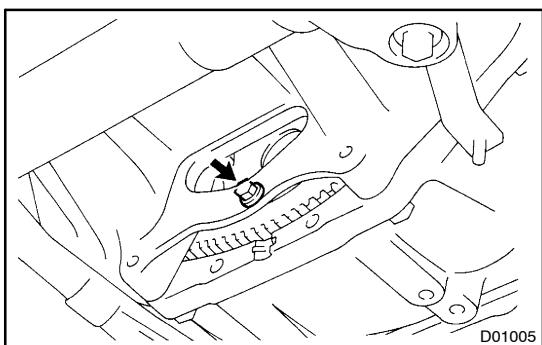


- (b) Turn the crankshaft to gain access to each bolt.
- (c) Hold the crankshaft pulley nut with a wrench and remove the 6 bolts.


**Torque: 48 N·m (490 kgf·cm, 35 ft·lbf)**

#### HINT:


At the time of installation, please refer to the following item.  
First install black colored bolt and then the 5 other bolts.

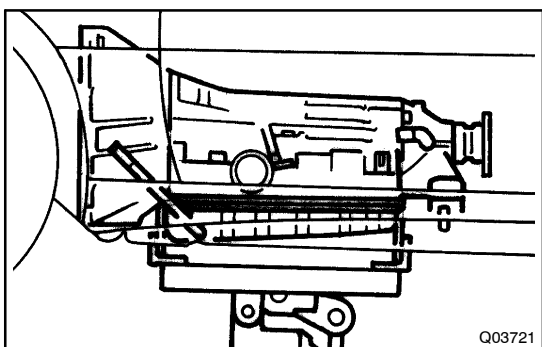

#### 15. SUPPORT TRANSMISSION WITH JACK

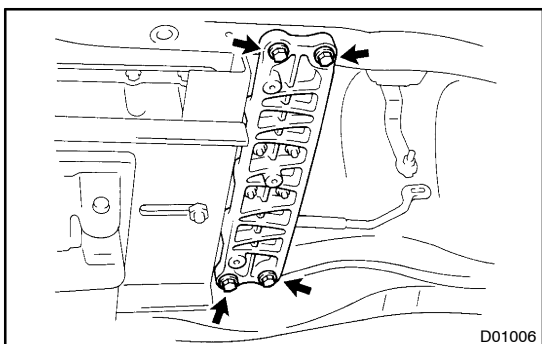

- 16. REMOVE ENGINE REAR MOUNTING 4 SET BOLTS  
**Torque: 26 N·m (270 kgf·cm, 20 ft·lbf)**

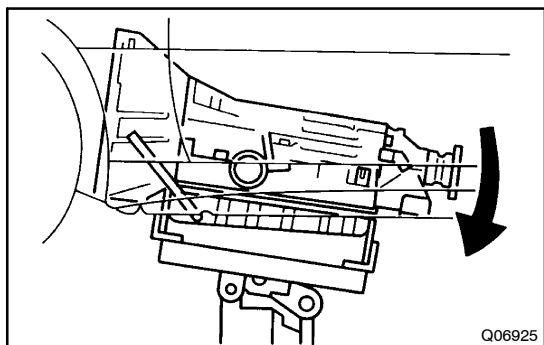
**17. DISCONNECT CONNECTORS AND WIRE HARNESS**

- (a) Tilt down the transmission.

**NOTICE:**

**Take care so that the cooling fan does not come in contact with the fan shroud.**

- (b) Disconnect the following connectors:
- (1) O/D direct clutch speed sensor connector
  - (2) Vehicle speed sensor connector
  - (3) Neutral start switch connector
  - (4) Solenoid connector
- (c) Disconnect the wire harness from the clamp on transmission.

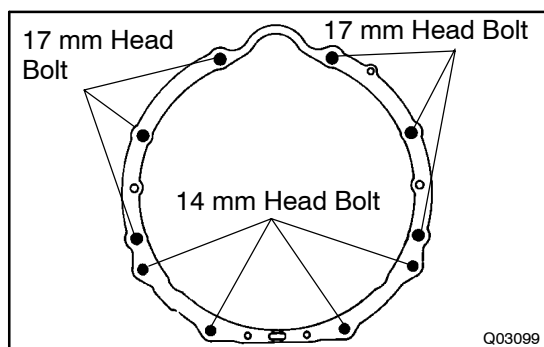
**18. REMOVE TRANSMISSION**

Remove the 10 bolts and transmission.

**Torque:**

**14 mm head bolt: 37 N·m (380 kgf·cm, 27 ft·lbf)**

**17 mm head bolt: 72 N·m (730 kgf·cm, 53 ft·lbf)**

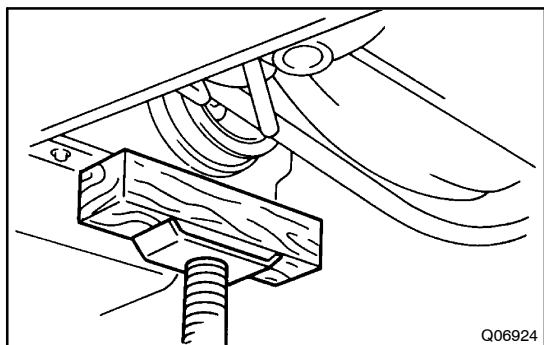**HINT:**

At the time of installation, please refer to the following item.  
Lift the engine front side.