


DTC CHECK/CLEAR

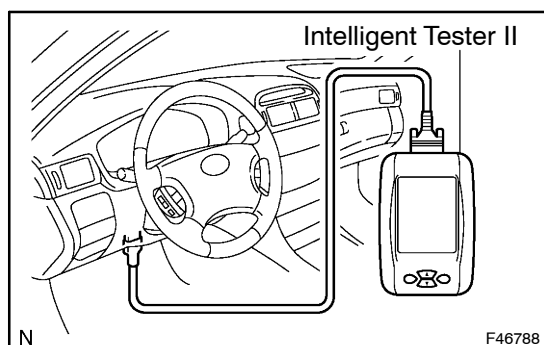

1. DTC CHECK

- (a) Check the DTCs.
 - (1) Connect the intelligent tester II to the DLC3.
 - (2) Turn the ignition switch to the ON position.
 - (3) Check the DTCs by following the prompts on the tester screen.

HINT:

Refer to the intelligent tester II operator's manual for further details.

- (b) Clear the DTCs.
 - (1) Connect the intelligent tester II to the DLC3.
 - (2) Turn the ignition switch to the ON position.
 - (3) Clear the DTCs by following the prompts on the tester screen.

HINT:

Refer to the intelligent tester II operator's manual for further details.