
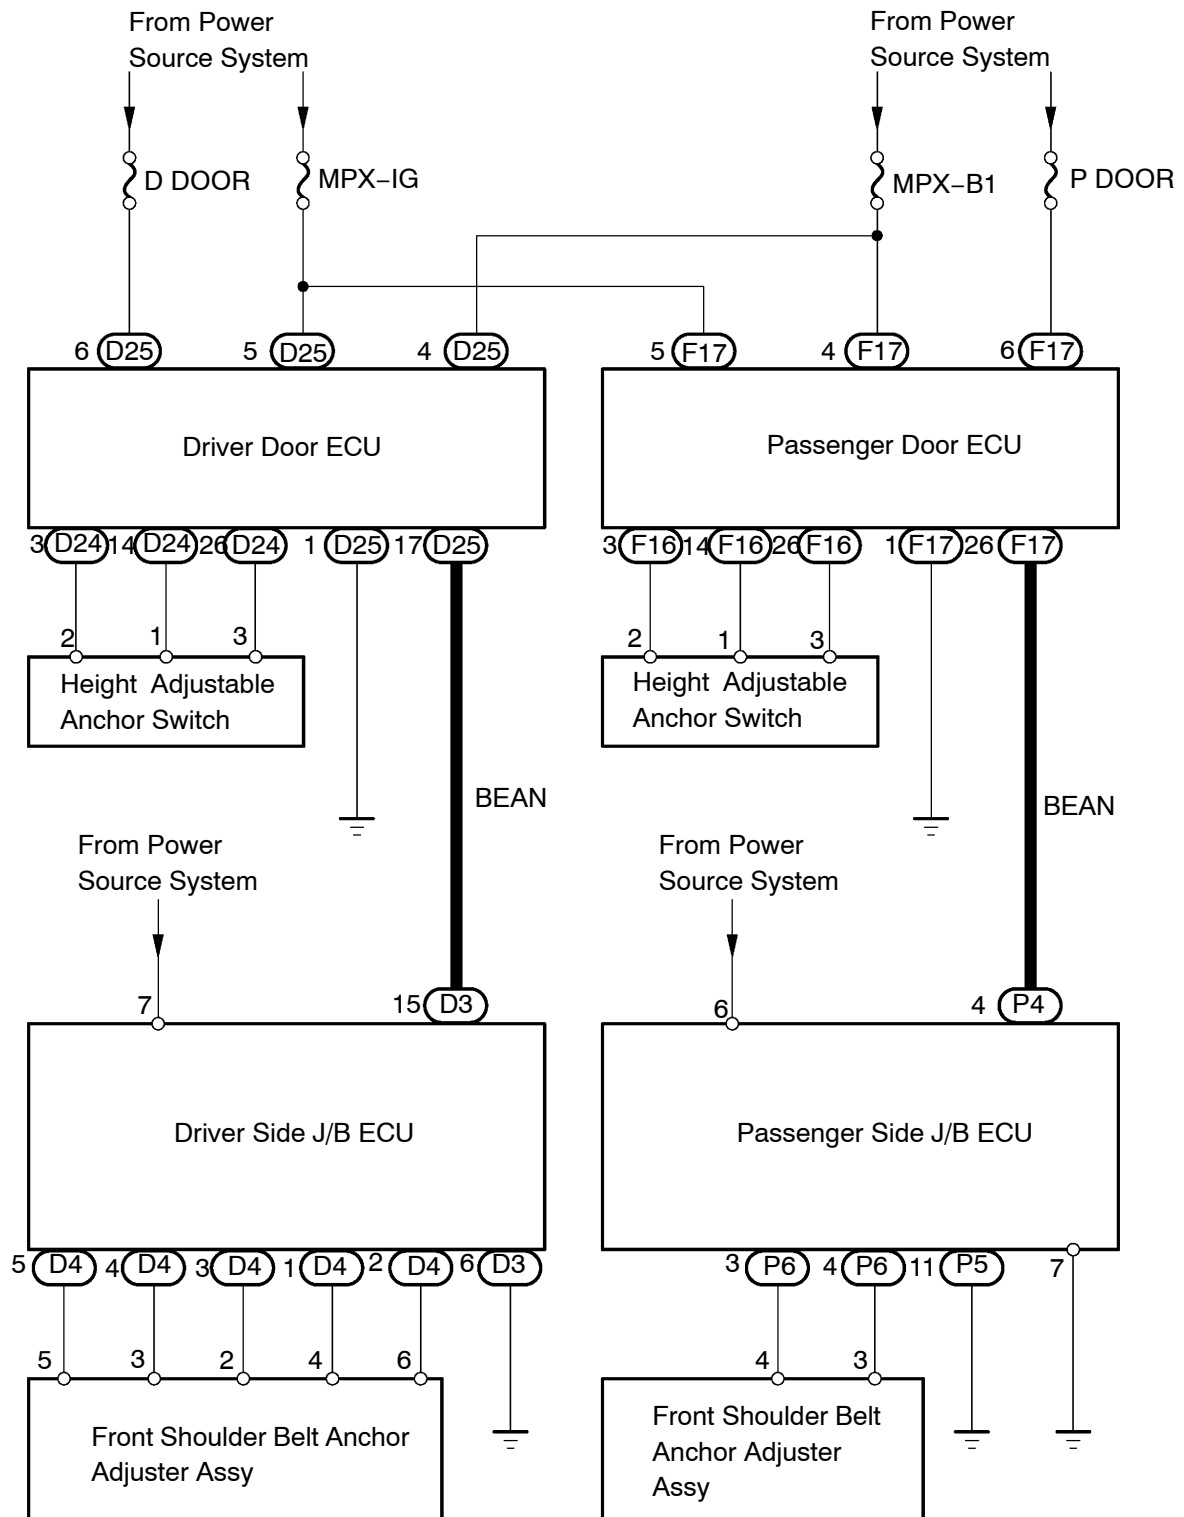


SYSTEM DIAGRAM

LHD Models

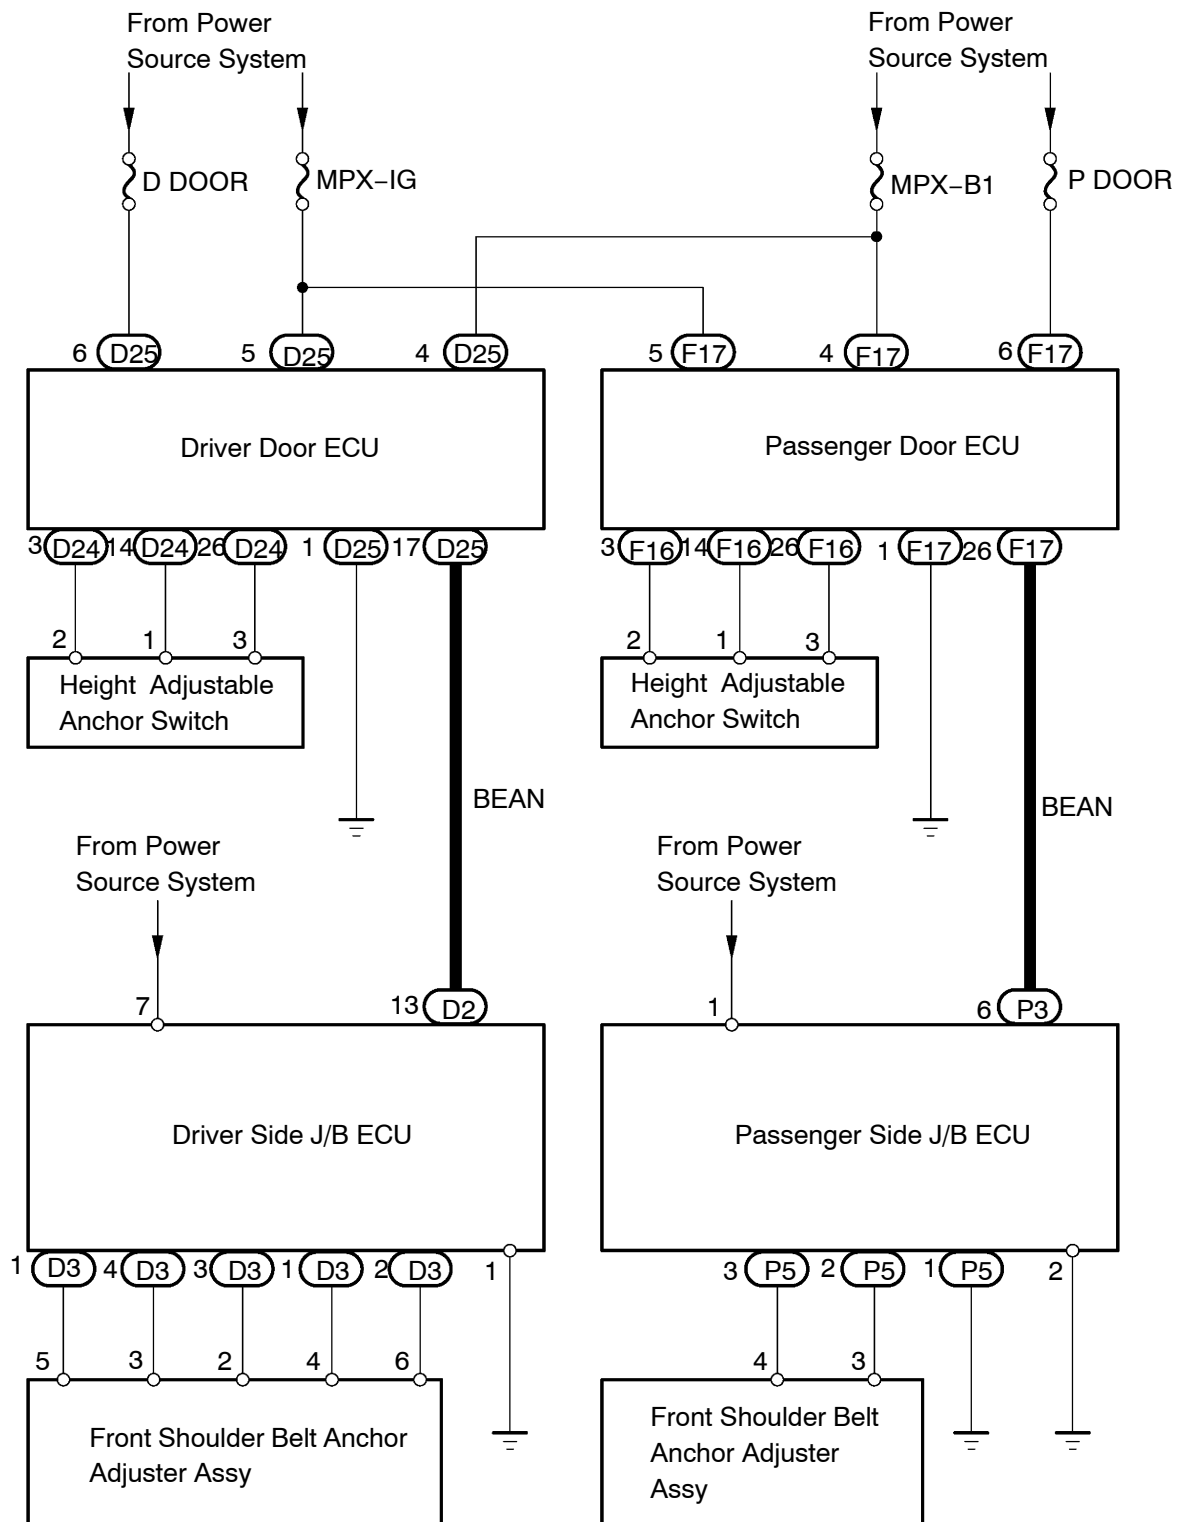

RHD Models

Y

B79067

DESCRIPTION

The position of the power adjustable shoulder belt anchor can be adjusted by operating the control switch, which is located on the door trim.