


REMOVAL

NOTICE:

- If the wiring connector of the SRS is disconnected with the ignition switch at ON position, DTCs will be recorded.
- Never use SRS parts from another vehicle. When replacing parts, replace them with new parts.
- Never reuse the sensor involved in a collision when the SRS has deployed.
- Never repair a sensor in order to reuse it.

1. REMOVE NO. 1 AIR CLEANER INLET

Remove the 2 bolts and No. 1 air cleaner inlet.

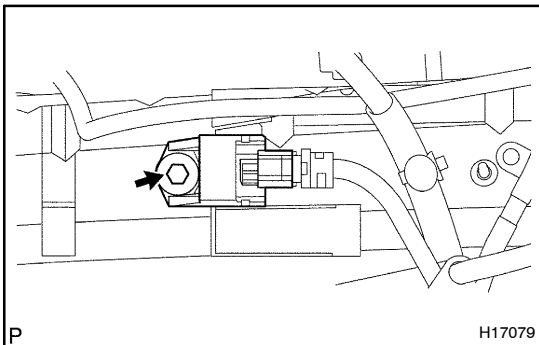

2. LH:


REMOVE FRONT AIRBAG SENSOR

- (a) Disconnect the connector.

NOTICE:

Disconnect the connector with sensor assembly installed.

- (b) Remove the bolt and front airbag sensor LH.

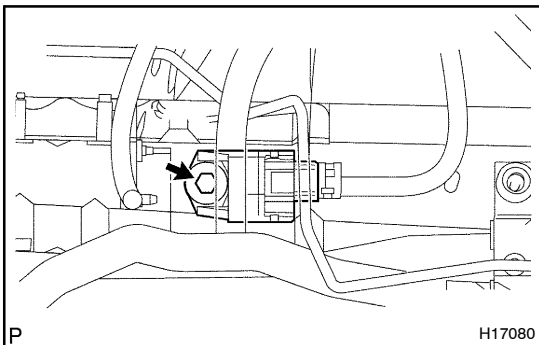

3. RH:

REMOVE FRONT AIRBAG SENSOR

- (a) Remove the 3 bolts and air cleaner assembly.

- (b) Disconnect the connector.

NOTICE:

Disconnect the connector with sensor assembly installed.

- (c) Remove the bolt and front airbag sensor RH.