



DISASSEMBLY

1. REMOVE 3RD COAST BRAKE PISTON OIL SEAL RING

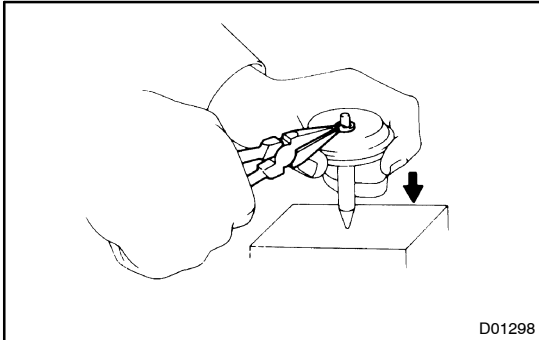

2. REMOVE 3RD COAST BRAKE PISTON ROD

- (a) Firmly hold down the piston, then compress the compression spring.
- (b) Remove the E-ring.

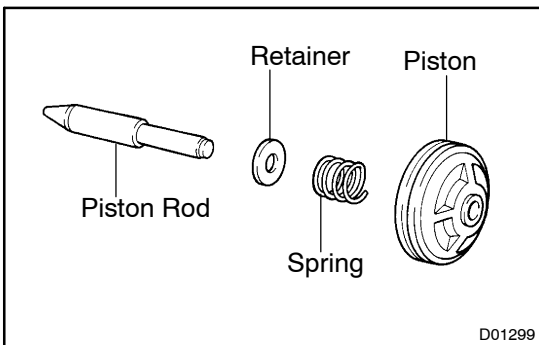

- (c) Remove the compression spring, retainer and piston rod.