

TOUCH PANEL SWITCH DOES NOT FUNCTION**INSPECTION PROCEDURE****1 CHECK TOUCH PANEL**

(a) Check for dirt on the display surface.

OK: The display surface is clean.


NG

REMOVE ANY DIRT FOUND AND RECHECK TOUCH PANEL

OK

2 DISPLAY CHECK MODE (TOUCH SWITCH CHECK)

(a) Enter the "Display Check" mode (Touch Switch Check) ([see page 05-1753](#)).

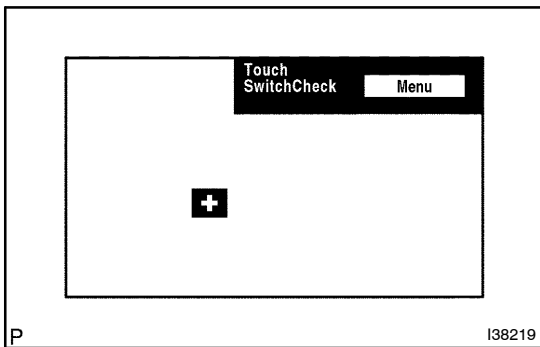

(b) Touch the display in the area where the abnormal switch occurs.

OK: A "+" mark appears at the touched position.

OK

**REPLACE MULTI-DISPLAY
(SEE PAGE 67-8)**

NG

**PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE
(SEE PAGE 05-1771)**