

REPLACEMENT

HINT:

- Use the same procedures for the RH side and LH side.
 - The procedures listed below are for the LH side.
 - Installation is in the reverse order of removal.
1. **PRECAUTION** (SEE PAGE 60-1)
 2. **DISCONNECT BATTERY NEGATIVE TERMINAL** (SEE PAGE 60-1)
 3. **REMOVE REAR SEAT CUSHION ASSY (FIXED TYPE)** (SEE PAGE 72-13)
 4. **REMOVE REAR SEAT BACK ASSY (FIXED TYPE)** (SEE PAGE 72-13)
 5. **REMOVE REAR SEAT CUSHION ASSY RH (POWER ADJUSTER TYPE)** (SEE PAGE 72-19)
 6. **REMOVE REAR SEAT CUSHION ASSY LH (POWER ADJUSTER TYPE)** (SEE PAGE 72-19)

HINT:


This procedure is only for the LH side.

7. **REMOVE REAR SEAT BACK ASSY RH (POWER ADJUSTER TYPE)** (SEE PAGE 72-19)
8. **REMOVE REAR SEAT BACK ASSY LH (POWER ADJUSTER TYPE)** (SEE PAGE 72-19)

HINT:

This procedure is only for the LH side.

9. **REMOVE REAR DOOR SCUFF PLATE LH** (SEE PAGE 76-52)
10. **REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP LH** (SEE PAGE 76-52)
11. **REMOVE REAR SEAT SIDE COVER LH** (SEE PAGE 76-52)
12. **REMOVE ROOF SIDE GARNISH INNER LH** (SEE PAGE 76-52)

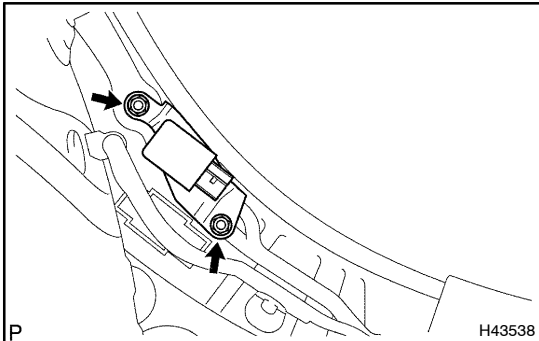

13. REMOVE AIR BAG SENSOR REAR LH

- (a) Disconnect the connector from the airbag sensor rear LH.
- (b) Remove the bolt, the nut and the airbag sensor rear LH.

14. INSTALL AIR BAG SENSOR REAR LH

- (a) Check that the ignition switch is off.
- (b) Check that the battery negative (-) terminal is disconnected.

CAUTION:

After removing the terminal, wait for at least 90 seconds before starting the operation.

- (c) Install the airbag sensor rear LH with the bolt and the nut.
Torque: 20 N·m (205 kgf·cm, 15 ft·lbf)

NOTICE:

- If the airbag sensor rear LH has been dropped, or there are any cracks, dents or other defects in the case, bracket or connector, replace it with a new one.
 - When installing the airbag sensor rear LH, be care that the SRS wiring does not interfere with other parts and that it is not pinched between other parts.
- (d) Connect the connector to the airbag sensor rear LH.
 - (e) Check that there is no looseness in the installation parts of the airbag sensor rear LH.

15. CONNECT BATTERY NEGATIVE TERMINAL**NOTICE:**

When disconnecting the negative (-) battery terminal, initialize the following systems after the terminal is reconnected.

System Name	See Page
Power Window Control System	01-20
Front Power Seat Control System	01-20
Back Guide Monitor System	01-20

16. INSPECT SRS WARNING LIGHT (SEE PAGE 05-954)