

REMOVAL


1. w/ Mudguard:

REMOVE FRONT MUDGUARD

Remove the 3 screws and front mudguard.

2. REMOVE FRONT FENDER MOULDING

(See page BO-85)

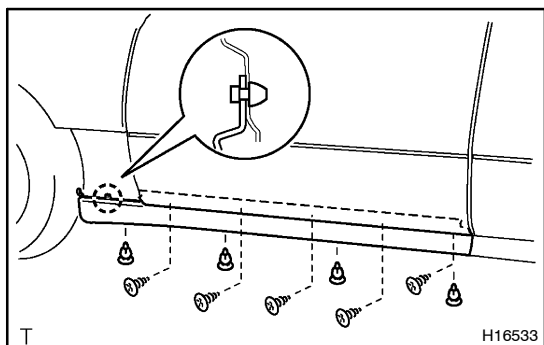


3. REMOVE FRONT ROCKER PANEL MOULDING


- Remove the 5 screws and 4 clips.
- Using a moulding remover, disengage the clips and remove the front rocker panel moulding.

4. REMOVE REAR ROCKER PANEL MOULDING

- Remove the 2 nuts clip and No. 5 rocker panel protector.

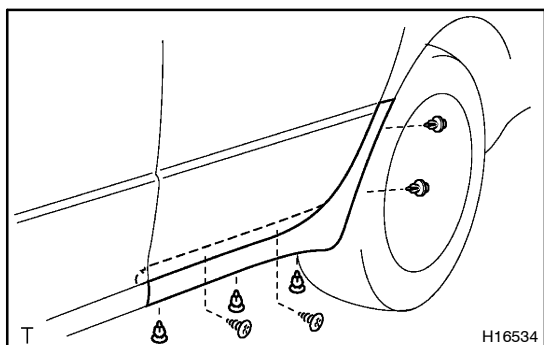

- Remove the 2 screws, 2 hexagon screws and 3 clips.

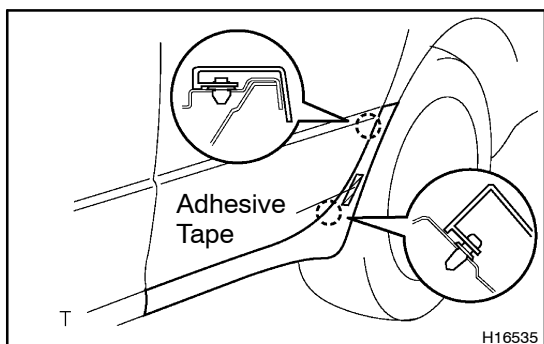

- Using a moulding remover, remove the rear rocker panel moulding.