


POWER OUTLET LOCATION

BE089-04

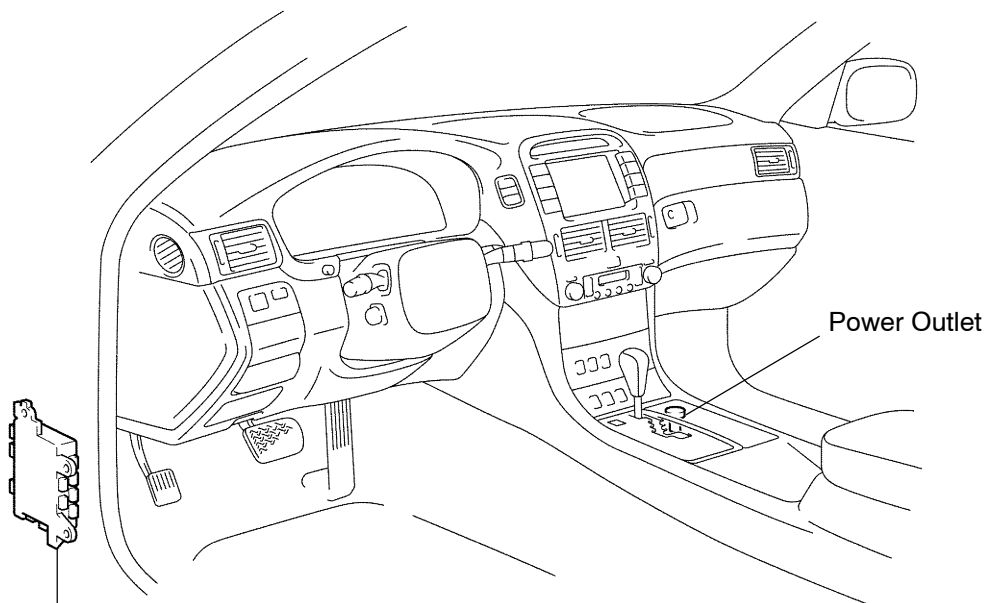

Driver Side J/B
● PWR OUTLET Fuse