



## DISASSEMBLY

1. REMOVE DRAIN HOSES
2. REMOVE ASPIRATOR
3. REMOVE EVAPORATOR TEMPERATURE SENSOR
4. REMOVE TUBE AND ACCESSORY AND EXPANSION VALVE

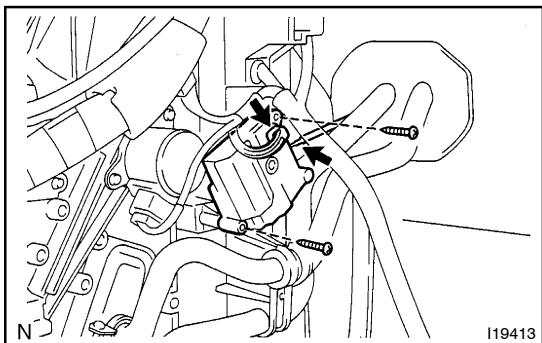


### 5. REMOVE WATER VALVE CONTROL SERVOMOTOR

- (a) Disconnect the connector.
- (b) Disconnect the control cable.
- (c) Remove the 2 screws and servomotor.

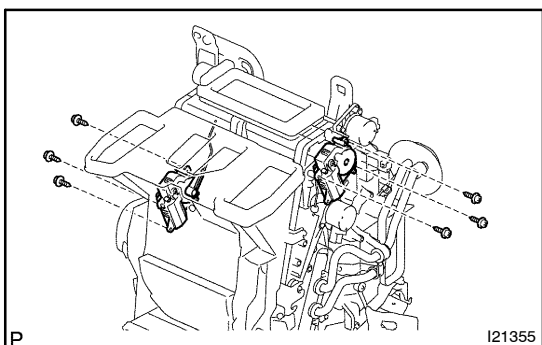


### 6. REMOVE COOL AIR BYPASS DAMPER CONTROL SERVOMOTORS

Remove the 6 screws and 2 servomotors.

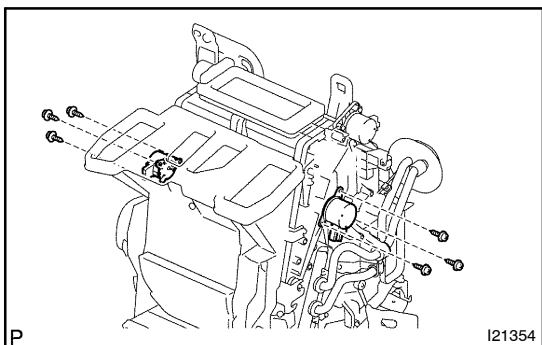



### 7. REMOVE AIR MIX SERVOMOTORS

Remove the 6 screws and 2 servomotors.

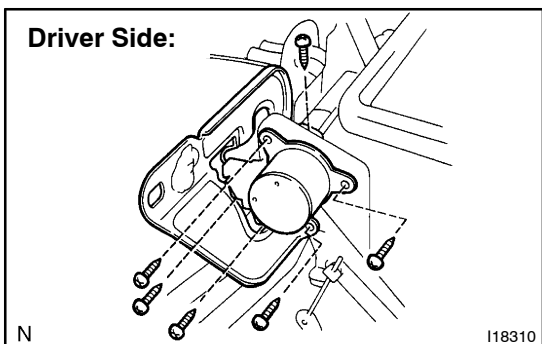


### 8. REMOVE AIR OUTLET SERVOMOTORS

- (a) Driver side:  
Remove the 3 screws and bracket.
- (b) Remove the 6 screws and 2 servomotors.

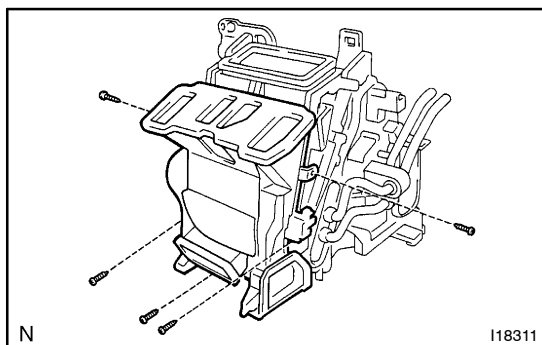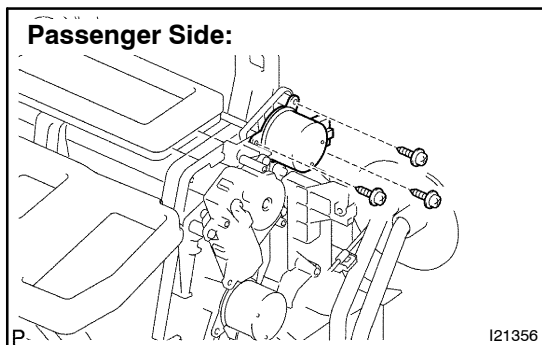

## 9. REMOVE DUCT

Remove the 5 screws and air vent duct.

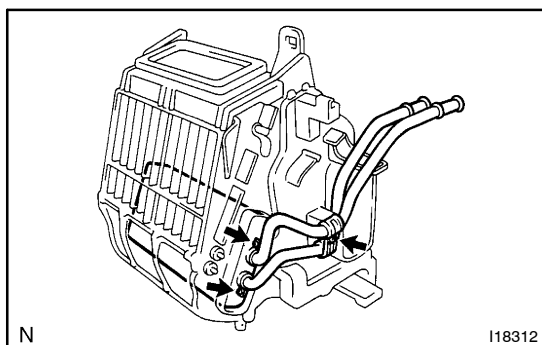


## 10. REMOVE HEATER RADIATOR

- Remove the screw and clamp.
- Remove the 2 screws, 2 clamps and heater radiator pipes.

### HINT:

At the time of reassembly, please refer to the following item.  
Do not reuse the 2 O-rings.

- Pull out the heater radiator.

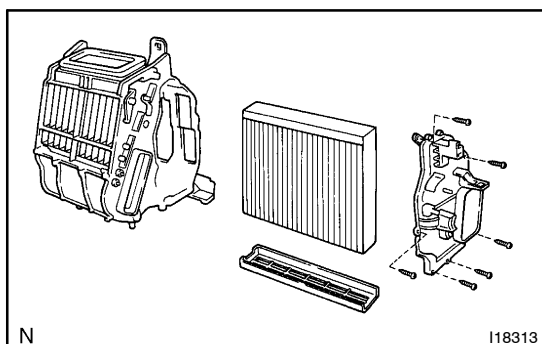

## 11. REMOVE EVAPORATOR


- Remove the 6 screws and evaporator cover.
- Pull out the evaporator.

### HINT:

At the time of installation, please refer to the following item.  
If evaporator is replaced, add compressor oil to the evaporator.

**Add 40 cc (1.4 fl.oz.)**

**Compressor oil: ND-OIL 8 or equivalent**

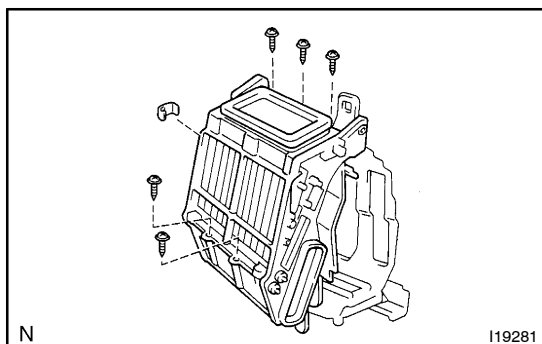

## 12. REMOVE HEATER CASE

Remove the 5 screws, clamp and heater case.