


REMOVAL

1. RUN ENGINE AT IDLE SPEED WITH A/C ON FOR APPROX. 10 MINUTES
2. STOP ENGINE
3. DISCONNECT NEGATIVE (-) TERMINAL CABLE FROM BATTERY
4. DISCHARGE REFRIGERANT FROM REFRIGERATION SYSTEM
5. REMOVE ENGINE UNDER COVER
6. REMOVE DRIVE BELT (See page AC-16)

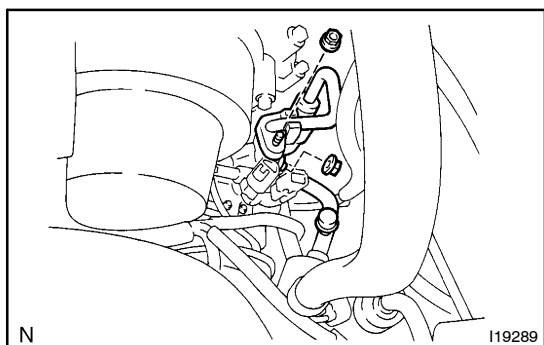


7. DISCONNECT DISCHARGE AND SUCTION HOSES

Remove the 2 nuts and disconnect the both hoses.

NOTICE:

Cap the open fittings immediately to keep moisture or dirt out of the system.

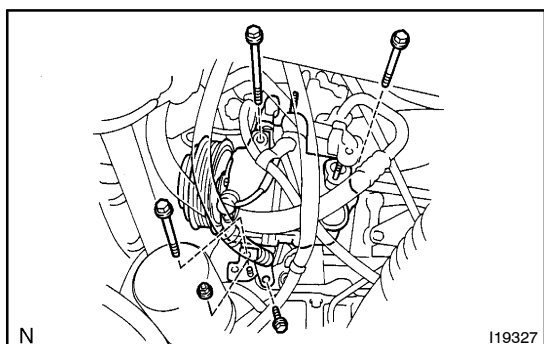

8. REMOVE COMPRESSOR

- (a) Disconnect the connector.
- (b) Remove the bolts and wire clamp.
- (c) Remove the 3 bolts, nut, bracket and compressor.