


## LOCATION

FL Block Assy


● D/C CUT H-fuse

● BATT Fuse

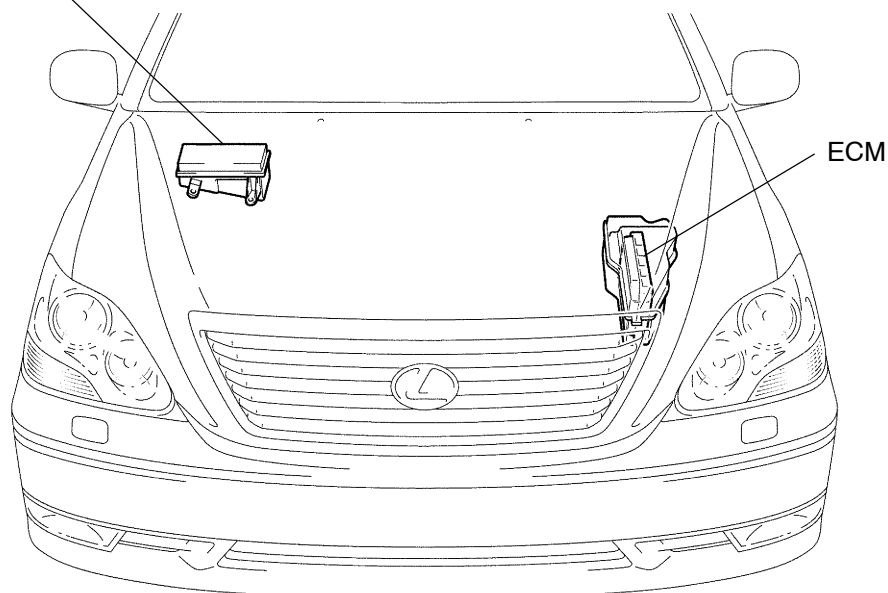

Steering Lock ECU

Security Indicator

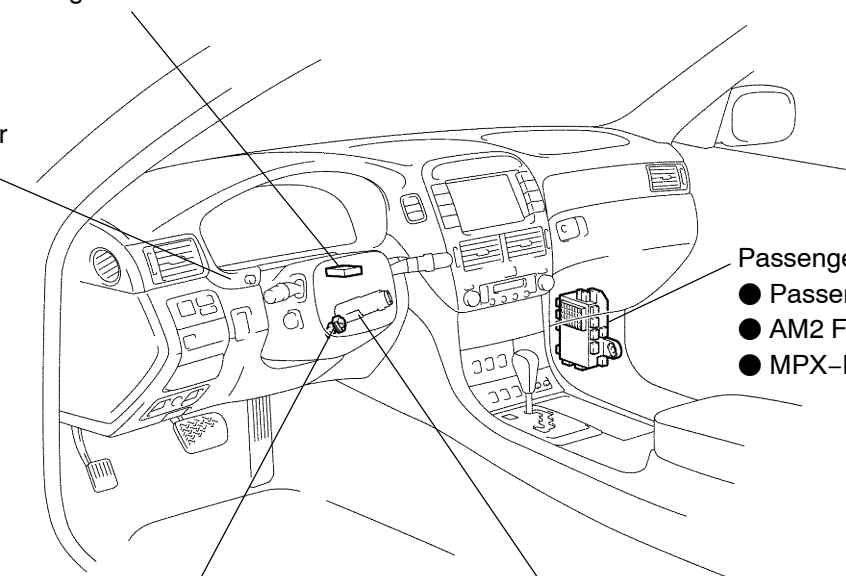

Passenger Side J/B

● Passenger Side J/B ECU

● AM2 Fuse

● MPX-B1 Fuse

For RHD vehicles, look at the same location on the opposite side of the vehicle.