


## REMOVAL

### 1. w/ Mudguard:

#### REMOVE FRONT MUDGUARD

Using a hexagon wrench, remove the 3 screws and front mudguard.

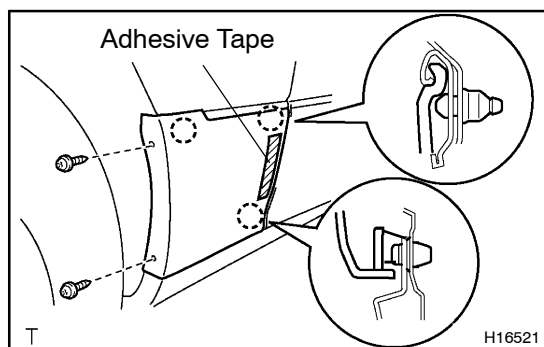

### 2. REMOVE FRONT FENDER MOULDING


#### (a) w/o Mudguard:

Using a hexagon wrench, remove the 2 screws.

(b) Using a moulding remover, pry out the moulding.

(c) Pull off the moulding by cutting the adhesive with a knife.

(d) Remove the front fender moulding.

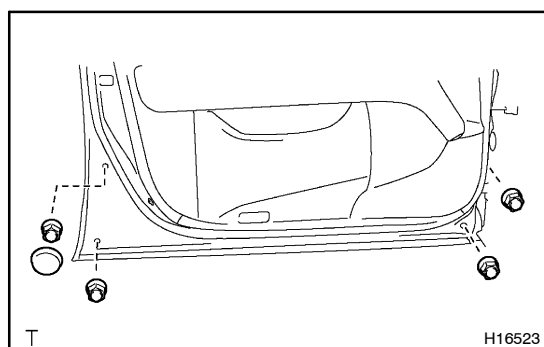


### 3. REMOVE FRONT DOOR OUTSIDE MOULDING

(a) Using a screwdriver, remove the hole cover.

#### HINT:

Tape the screwdriver tip before use.


(b) Remove the 4 nuts.

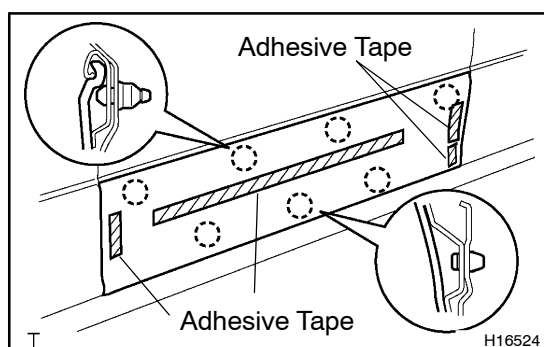

(c) Using a moulding remover, pry out the moulding.

(d) Pull off the moulding by cutting the adhesive with a knife.

(e) Remove the front door outside moulding.

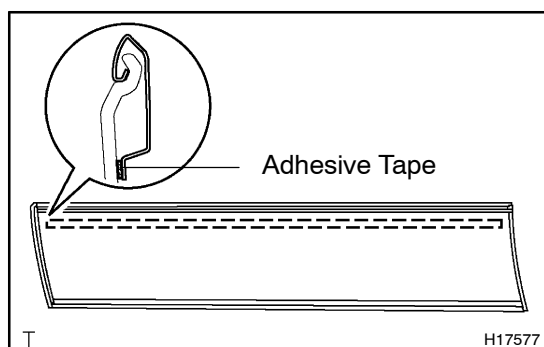


### 4. REMOVE FRONT DOOR OUTSIDE UPPER MOULDING

(a) Using a moulding remover, pry out the moulding.


(b) Pull off the moulding by cutting the adhesive with a knife.

(c) Remove the front door outside upper moulding from the front door outside moulding.

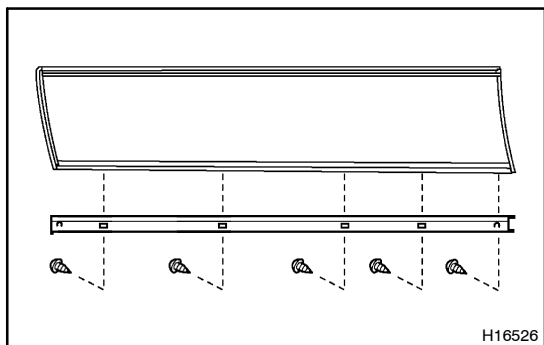

## 5. REMOVE FRONT DOOR OUTSIDE LOWER MOULDING

Remove the 5 screws and front door outside lower moulding from the front door outside moulding.

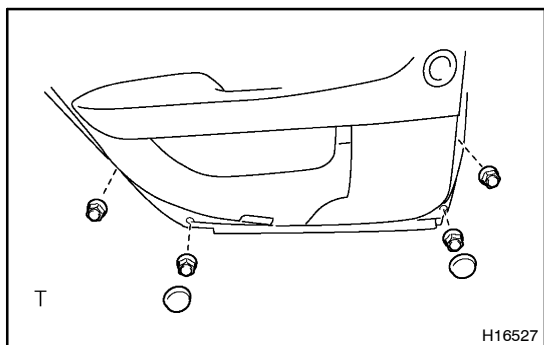


## 6. REMOVE REAR DOOR OUTSIDE MOULDING

(a) Using a screwdriver, remove the 2 hole covers.

HINT:

Tape the screwdriver tip before use.


(b) Remove the 4 nuts.

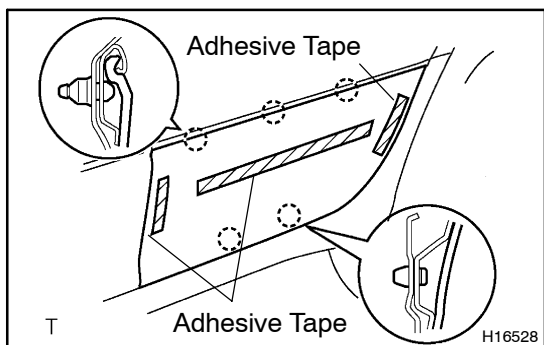

(c) Using a moulding remover, pry out the moulding.

(d) Pull off the moulding by cutting the adhesive with a knife.

(e) Remove the rear door outside moulding.

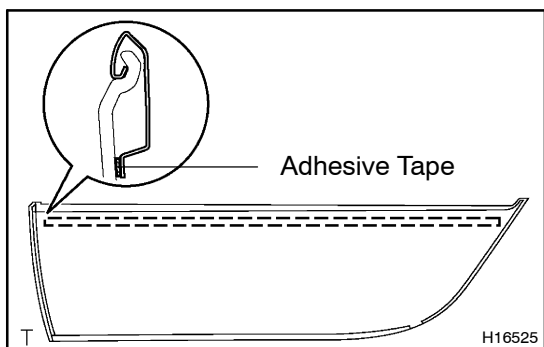


## 7. REMOVE REAR DOOR OUTSIDE UPPER MOULDING

(a) Using a moulding remover, pry out the moulding.

(b) Pull off the moulding by cutting the adhesive with a knife.

(c) Remove the rear door outside upper moulding from the rear door outside moulding.

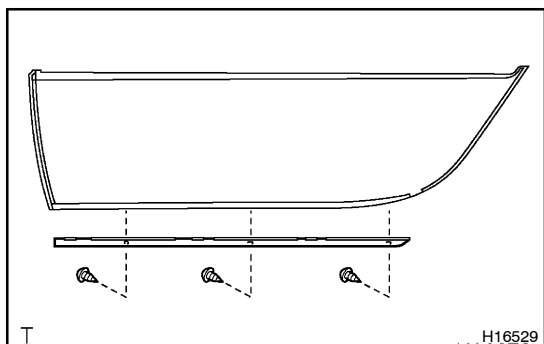

## 8. REMOVE REAR DOOR OUTSIDE LOWER MOULDING

Remove the 3 screws and rear door outside lower moulding.