

## REMOVAL

### 1. DRAIN ENGINE COOLANT FROM RADIATOR


HINT:

It is not to drain out all coolant.

### 2. REMOVE AIR INLET DUCT

### 3. REMOVE AIR CLEANER ASSEMBLY

### 4. DISCONNECT RADIATOR UPPER HOSE

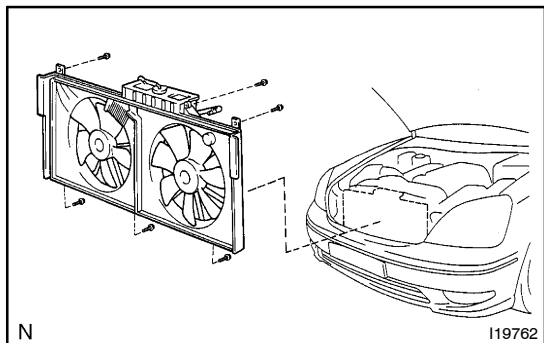

### 5. REMOVE CONDENSER FAN

(a) Disconnect the connector.

(b) Remove the 6 bolts and fan.

**Torque: 5.0 N·m (50 kgf·cm, 44 in.·lbf)**