


REMOVAL

1. REMOVE BOTH STABILIZER BAR LINKS

- (a) Remove the 4 nuts and stabilizer bar links.

Torque: 65 N·m (660 kgf·cm, 48 ft·lbf)

- (b) Employ the same manner described above to the other side.

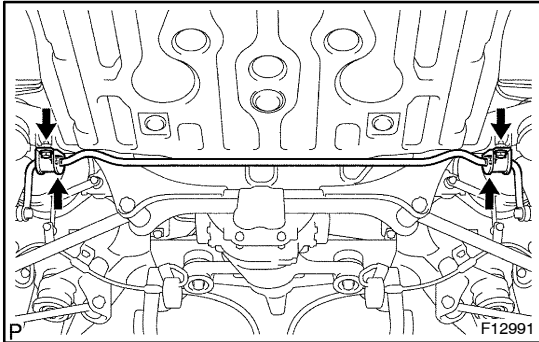

2. REMOVE STABILIZER BAR

- (a) Remove the 4 bolts and both stabilizer bar brackets.

Torque: 18 N·m (180 kgf·cm, 13 ft·lbf)

- (b) Pull out the stabilizer bar.
(c) Remove the both bushings.

3. REMOVE BOTH BUSHINGS