


D01477

REASSEMBLY

1. INSTALL EXTENSION HOUSING BEARING

- (a) Install the bearing to the extension housing.
- (b) Using snap ring pliers, install the snap ring.

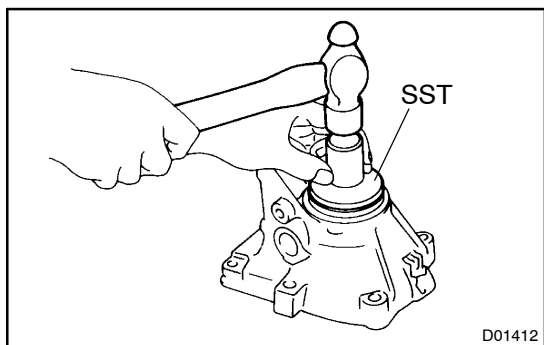

D01412

2. INSTALL OIL SEAL TO EXTENSION HOUSING

Using SST, install the new oil seal.

SST 09309-37010