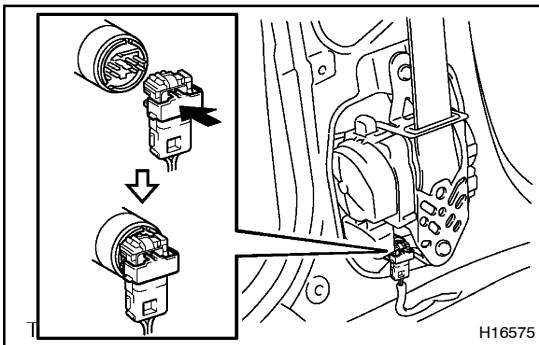


INSTALLATION

NOTICE:

- Never use seat belt pretensioner from another vehicle. When replacing parts, replace them with new parts.
- Make sure that the front seat outer belt is installed with the specified torque.
- If the front seat outer belt has been dropped, or there are cracks, dents or other defects in the case or connector, replace the front seat outer belt with a new one.
- When installing the front seat outer belt, take care that the wiring does not interfere with other parts and is not pinched between other parts.



1. INSTALL FRONT SEAT OUTER BELT

- (a) Install the retractor of front seat outer belt with the 2 bolts.

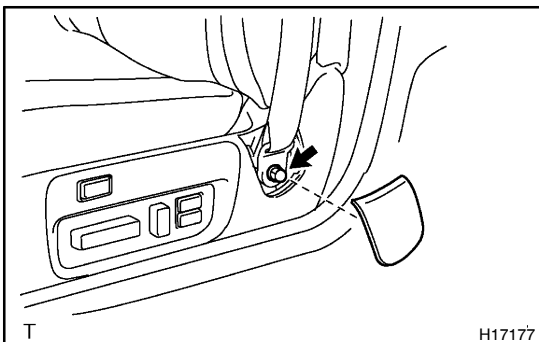
Torque:

Upper bolt: 7.5 N·m (75 kgf·cm, 67 in·lbf)

Lower bolt: 42 N·m (430 kgf·cm, 31 ft·lbf)

- (b) Connect the pretensioner connector as shown in the illustration.
- (c) Connect the connector.
- (d) Install the front seat outer belt shoulder anchor with the nut.

Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)

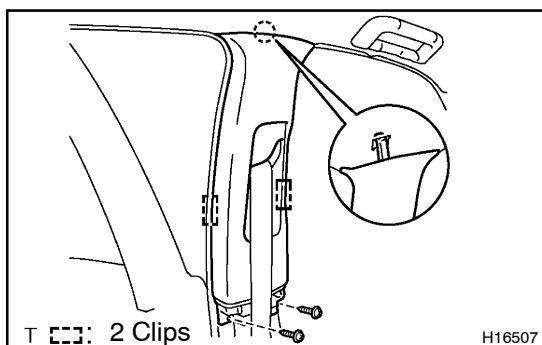


2. INSTALL FRONT SEAT OUTER BELT ANCHOR

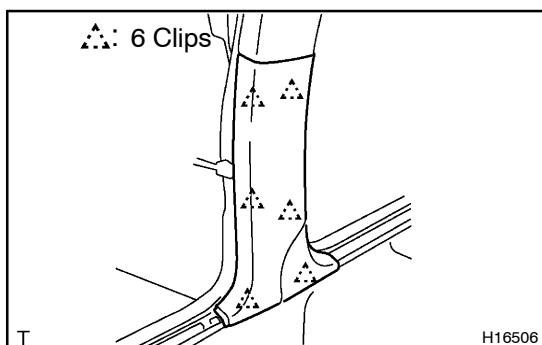
- (a) Install the front seat outer belt anchor with the nut.

Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)

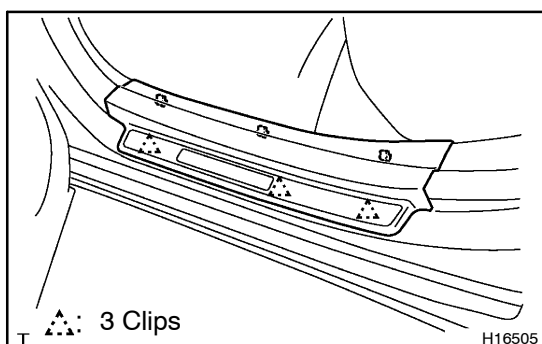
- (b) Install the anchor cover to the front seat.

**3. INSTALL CENTER PILLAR UPPER GARNISH**

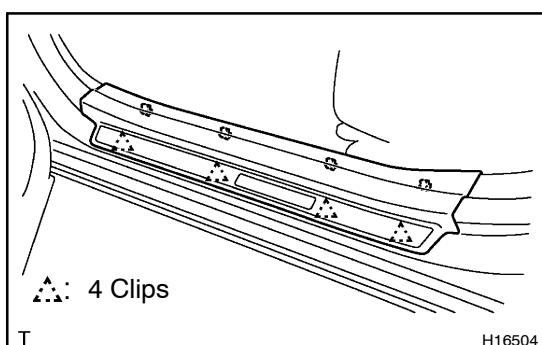
Install the center pillar upper garnish with the 2 screws as shown in the illustration.

**4. INSTALL CENTER PILLAR LOWER GARNISH**

Install the center pillar lower garnish to the body.

5. INSTALL FRONT PART OF REAR DOOR OPENING TRIM**6. INSTALL REAR PART OF FRONT DOOR OPENING TRIM****7. INSTALL REAR DOOR SCUFF PLATE**

Install the rear door scuff plate to the body.

**8. INSTALL FRONT DOOR SCUFF PLATE**

Install the front door scuff plate to the body.