

STEREO COMPONENT TUNER ASSY REPLACEMENT


67143-01

HINT:

- COMPONENTS: [\[SEE PAGE 75-44\]](#).
- LOCATION: [\[SEE PAGE 67-2\]](#).
- Installation is in the reverse order of removal.


1. **REMOVE LUGGAGE COMPARTMENT FLOOR MAT** ([\[SEE PAGE 75-47\]](#))

2. **REMOVE DECK TRIM SIDE BOARD RH** ([\[SEE PAGE 75-47\]](#))

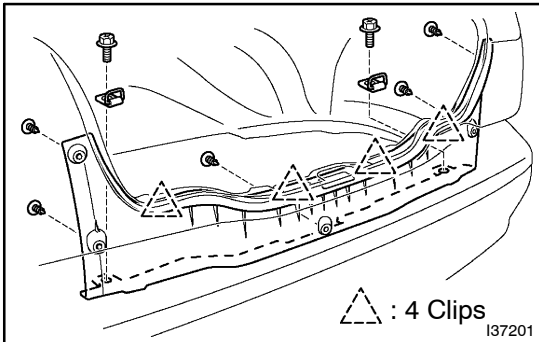


3. REMOVE REAR FLOOR FINISH PLATE

- (a) Remove the 2 bolts and 2 hooks.
- (b) Remove the 5 clips.
- (c) Disengage the 4 clips and remove the rear floor finish plate.

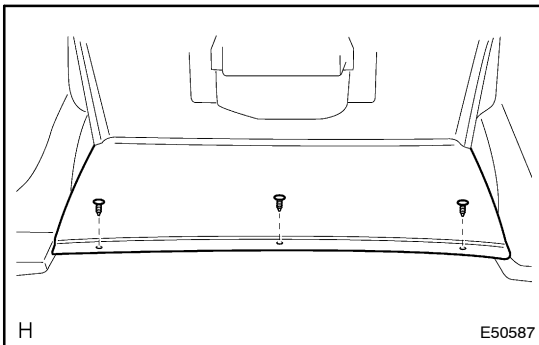

4. SEPARATE LUGGAGE COMPARTMENT TRIM COVER FRONT


- (a) Remove the 3 clips and luggage compartment trim cover front.

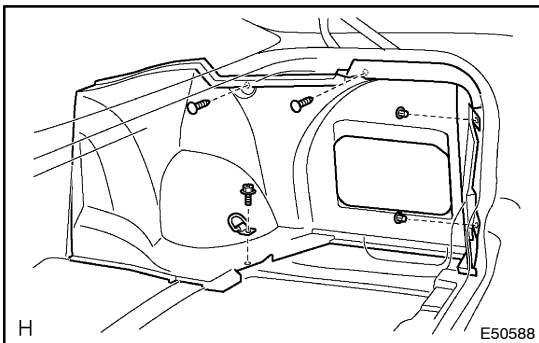

5. REMOVE LUGGAGE COMPARTMENT TRIM COVER ASSY RH


- (a) Remove the bolt and hook.
- (b) Remove the 4 clips and luggage compartment trim cover assy RH.

6. **REMOVE NAVIGATION ECU W/BACKET (W/ LEXUS NAVIGATION SYSTEM)**
([\[SEE PAGE 67-9\]](#))

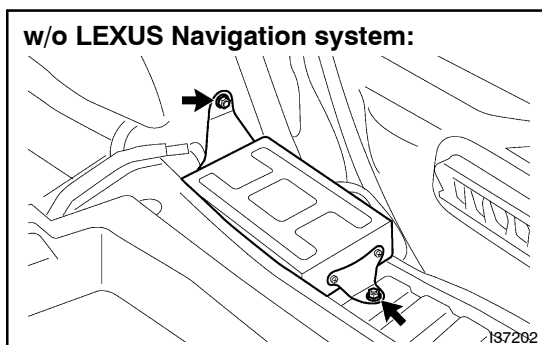


7. REMOVE STEREO COMPONENT TUNER ASSY W/BRACKET (W/O LEXUS NAVIGATION SYSTEM)

- (a) Disconnect the connector.
- (b) Remove the 2 nuts and stereo component tuner assy with bracket.

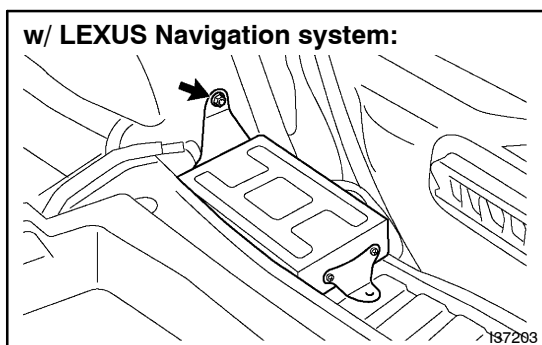

8. REMOVE STEREO COMPONENT TUNER ASSY W/BRACKET (W/ LEXUS NAVIGATION SYSTEM)

- (a) Disconnect the connector.
- (b) Remove the nut and stereo component tuner assy with bracket.

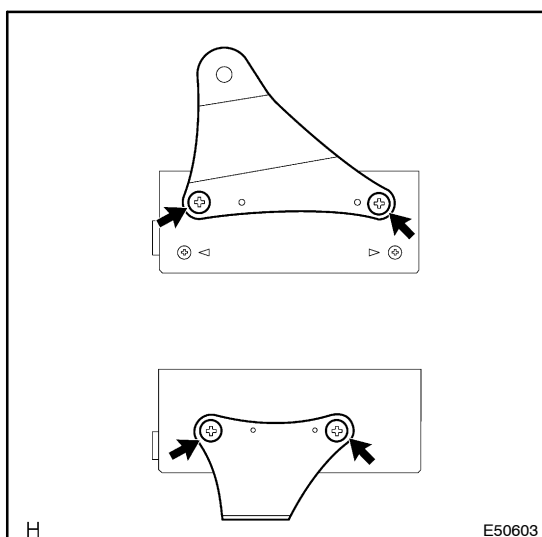

9. REMOVE STEREO COMPONENT TUNER ASSY

- (a) Remove the 4 screws and 2 brackets.