


INSTALLATION

1. INSTALL SEATBACK ASSEMBLY

- (a) w/ Seat heater:
Connect the connector.

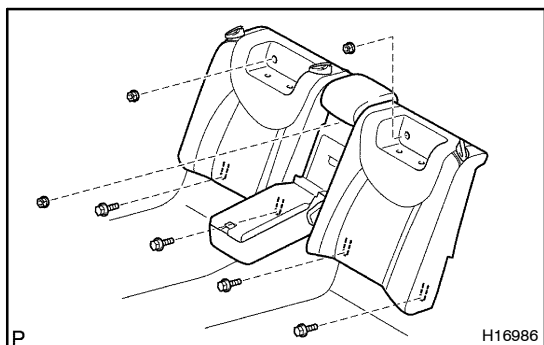

- (b) Install the seatback assembly with the 4 bolts and 3 nuts.

Torque:

Bolt: 18 N·m (185 kgf·cm, 13 ft·lbf)

Nut: 18 N·m (185 kgf·cm, 13 ft·lbf)

- (c) Install the LH and RH headrests.
(d) Install the rear seat belts to the belt guides.

2. INSTALL SEAT CUSHION ASSEMBLY

- (a) w/ Seat heater:
Connect the connector.
(b) Set the seat cushion assembly.
(c) Push the front portion of the seat cushion assembly down to install it.

HINT:

Confirm that the seat cushion assembly is firmly installed.

