


REMOVAL

1. REMOVE ENGINE UNDER COVER
2. REMOVE V-BANK COVER AND ENGINE ROOM SIDE COVER RH

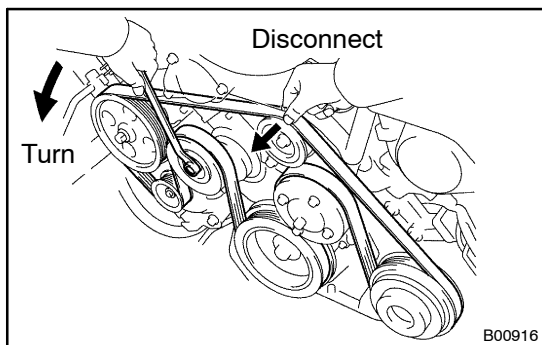


3. REMOVE DRIVE BELT

Loosen the belt tension by turning the drive belt tension counterclockwise, and remove the drive belt.

HINT:

The tension pulley has a left-hand thread.

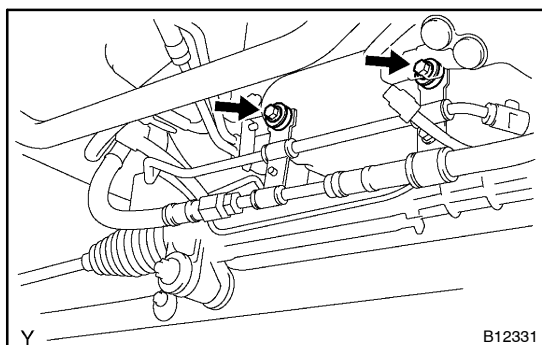

4. DISCONNECT PS OIL COOLER PIPE FROM OIL PAN

Remove the 2 bolts and 2 screws, disconnect the 2 PS oil cooler pipes from the oil pan.

5. REMOVE ALTERNATOR

- (a) Disconnect the alternator connector.
- (b) Remove the rubber cap and nut, disconnect the alternator wire.
- (c) Remove the bolt and cord clip from the alternator.
- (d) Remove the bolt, 2 nuts, wire bracket and alternator.