


KEYBOARD MATRIX

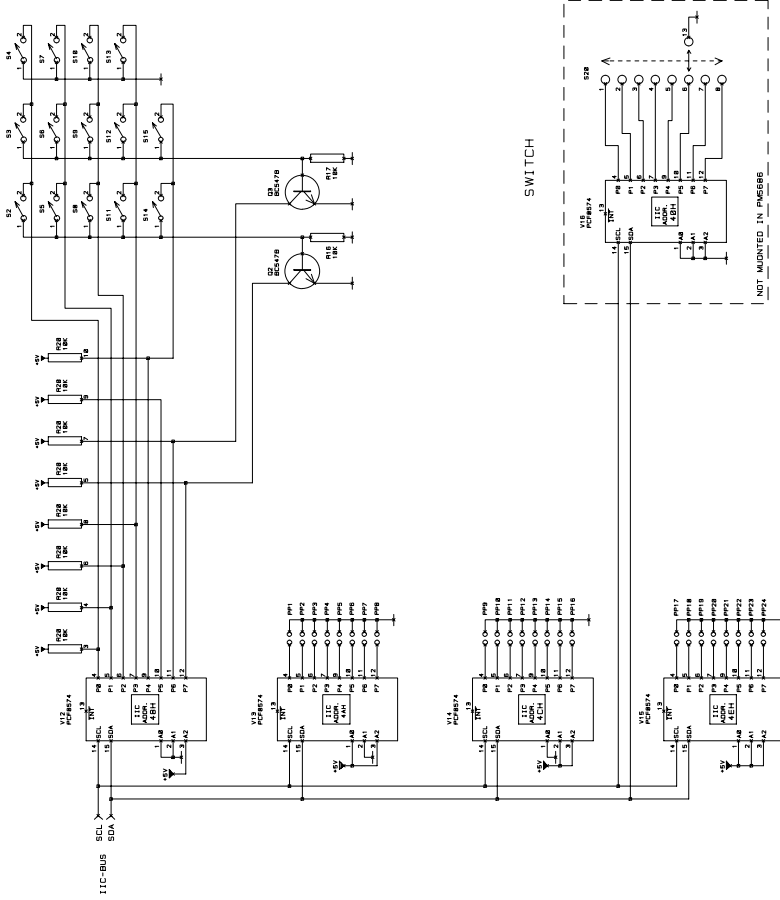

PMS887	
92	ANALOG INPUT
93	DIGITAL INPUT
94	STEREO MODE
95	DUAL MODE
96	MIXED MODE
97	DATA MODE
98	SEND OUT-SEND A/B
99	SEND OUT-SEND C
516	EXT. AUDIO
517	INT. AUDIO
518	PREEMPH. ON
519	PREEMPH. OFF
515	CARRIER 2 ON
515	CARRIER 2 OFF
PMS886	
PMS885	

S2,S3,S14,S15:NOT MOUNTED IN PM5685
S2 TO S13:NOT MOUNTED IN PM5686

52	IF-MODE INTERC.
53	IF-MODE SPLIT
54	IF INPUT
55	INTERC. INPUT
56	NICAM INPUT
57	NOT MOUNTED IN PA5688
58	EYE
59	BER
510	DEEMPHASIS ON
511	DEEMPHASIS OFF
512	NOT MOUNTED IN PA5688
513	NOT MOUNTED IN PA5688
514	DUAL SOUND A
515	DUAL SOUND B

THIS DIAGRAM COVERS ALSO:

1) 4008 109 7046	PM5685
2) 4008 109 7038	PM5686
3) 4008 108 9923	PM5687
4) 4008 109 7063	PM5688

[illegible]