



SPE


User manual

Version 001B
June 2017

1. Standalone: SPE Desktop Windows

To update the Slate106 content with a PC computer, you need:

- 1 device Slate106
- 1 USB cable (Micro USB type B to USB) (similar to Smartphone cable)
- 1 MS-Windows computer supporting USB connector and SPE installed.
 - The 'SPE' software (Spe.exe) is delivered with the product
 - It is available also <http://www.innes.pro>
- Connect the USB cable between your computer and your Slate106 and wait that the USB peripheral (Slate106) is mounted properly.
- Execute 'SPE' software ([spe.exe](#)) from the Slate106 USB device (mounted by MS-Windows)
- Edit your text on 'SPE' software like any text editor changing font size, font type...

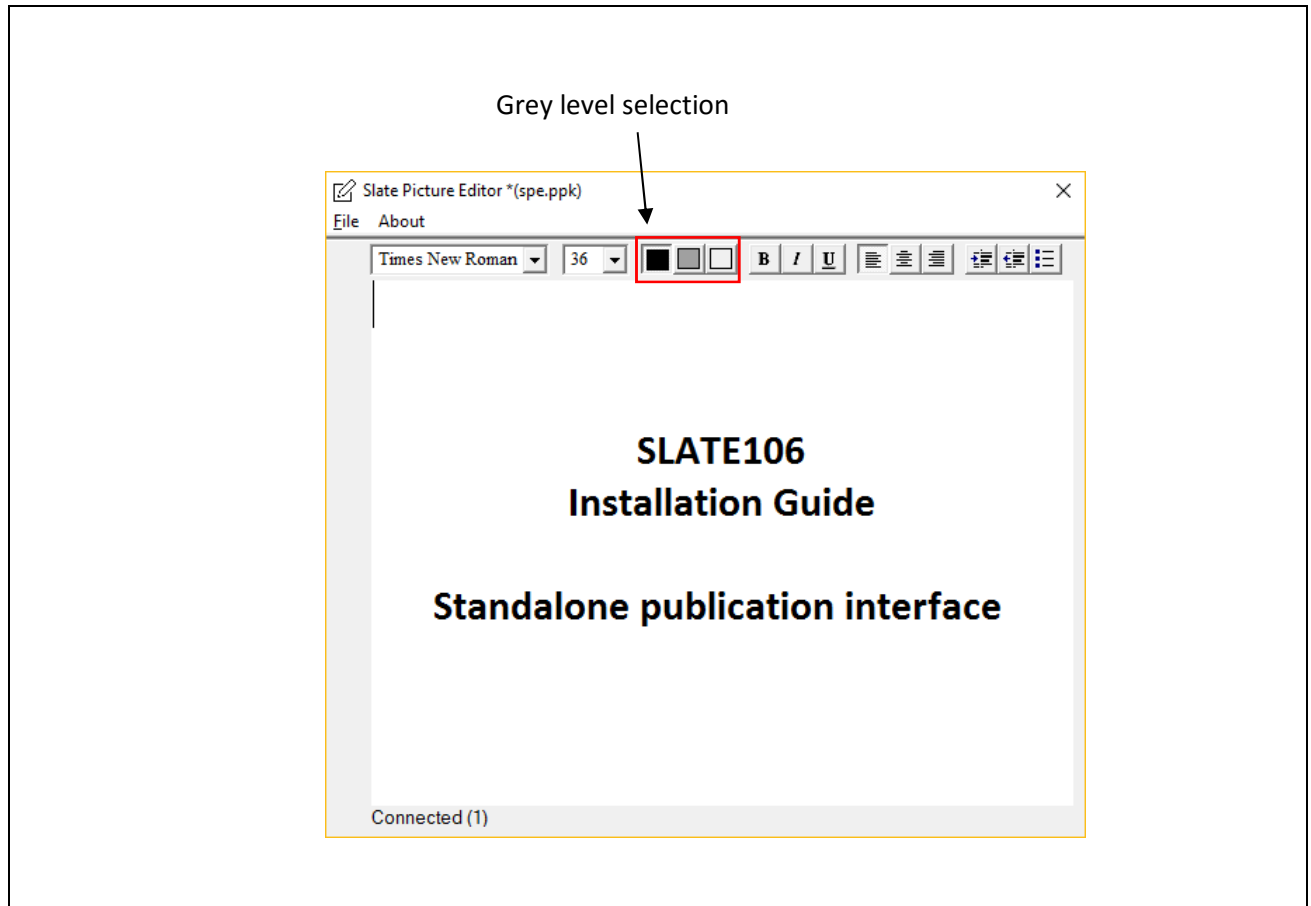

You can also select grey level on the interface (black, dark grey, light grey).

- Use special fonts to add icons.
- When finished, go to **"File" > "Save to Slate"** (your picture is saved as '[spe.ppk](#)' on your Slate106 device)
 - your content should be displayed on Slate106.

2. Standalone: SPE Application for mobile

Not yet supported