



START OF SHIFT

Session If app was not previously logged out make a selection. Continue or start a new session?

Login If your name is not in the list tap the blue refresh icon. Otherwise complete the selections.

Settings Display Manage Shots

You can use Manage shots, if shots need to be downloaded before logging in.

Prestart

Swipe left or right on each prestart item.

1. Hole Loading

✓ Prestart

Swipe to the left to indicate a defect. Swipe to the right to indicate an item has passed. Tap on an item to enter comments.

Category A Defects - Unsafe to Operate Machine.

Steering System ✓ Swipe Right – passed

Service brake

Park Brake

Two way radio ⚠ Swipe Left – defect

2

Tap on a prestart item to add a comment.

Engine Hours

Enter the SMU engine hours at start of shift.

1. Hole Loading

✓ Pre-Start

⚠ Equipment Hours

⚠ Hole Loading

Equipment Engine Hours VM8880 5 Jul - DS

1 Start 2340 End

Total Hours -

Comments

2 Save

END OF SHIFT

Set Equipment States

1. Choose the reason for logout and select from any Delay, Stand by or Down states.
2. Enter the comment and proceed to log out.

Standby / NR / Not Required (No Work)

Comments

2

Ready Delay Standby 1 Down

Logout Press logout and confirm.



Confirm Logout

Are you sure you want to logout?

NO YES

4

Engine Hours Enter the end SMU engine hours.

Equipment Engine Hours VM8880 5 Jul - DS




5 End 2345

6 Comments End of the shift

To finish the session, press Next.





Download Drill Locations

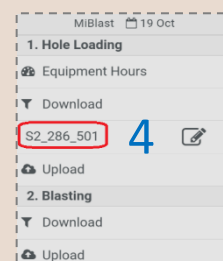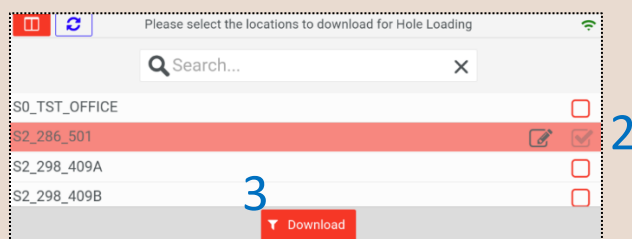
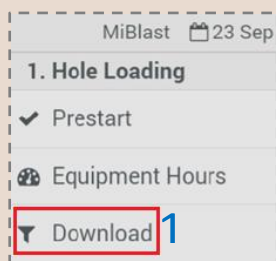


Cup Weights

For Blast deck activities to be associated with a cup weight, the cup weight needs to be generated first. All subsequent decks will be assigned to this cup weight until a new cup weight is generated.

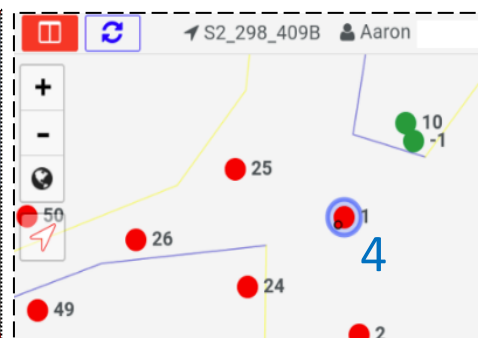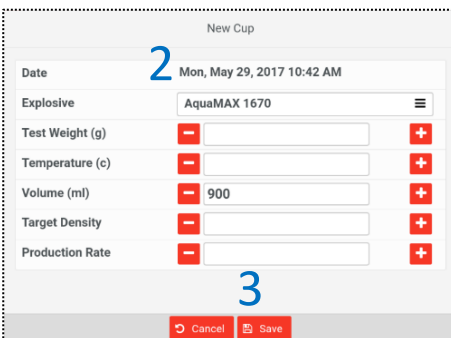

1. To create a new cup weight, select a hole that you want the cup weight to be assigned to and press "Cup Weight" tab. You can then select "New Cup" button.
2. Populate the cup weight details.
3. Press save to apply the changes, or cancel to ignore.
4. Once the hole has a cup weight assigned to it, a little red circle will appear on the hole.
5. To view cupweight details and create a new measure, choose cupweights from the left side MiBlast menu.
 - a. Add a new measurement for the current cup weight using "+ New Measurement" button, then enter its new weight.

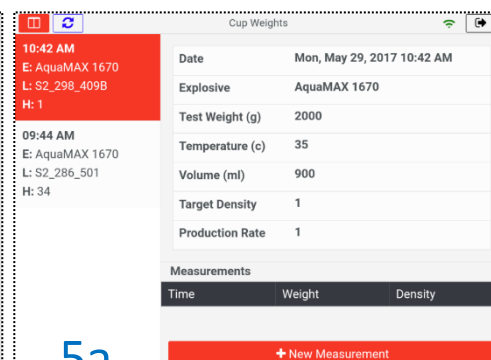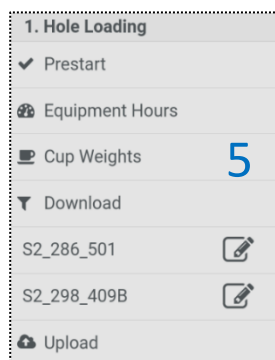

Navigation



Copy



Data list



Refresh-data









Wifi/3G
connected

p2



Hole Loading

1. Tap on a hole to start.
2. You can switch between Design and Actual by tapping the button. The Design allows you to view information.
3. Select a Deck to enter the Actual values. Enter Dip Depth and comments for selected Deck. The actual value is displayed at the bottom of the deck.
4. Select Accessories, if there is no design accessory then you can click on preferences and choose from the lists and press save.
5. Enter the Actual values for the accessories and you can see the number of accessories chosen is displayed on the deck.
6. Select the explosives and enter the actual values. If the actual value is same as design you can use the copy icon.
7. To create a new deck, hold an existing deck for few seconds. Enter the properties of new deck and press Save.

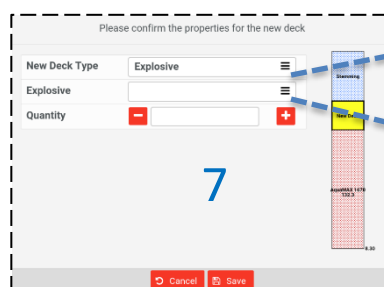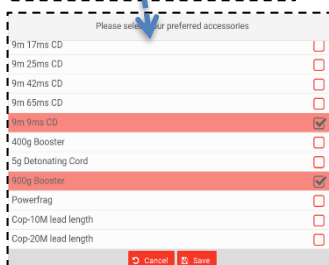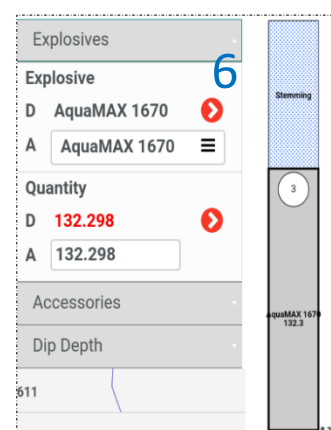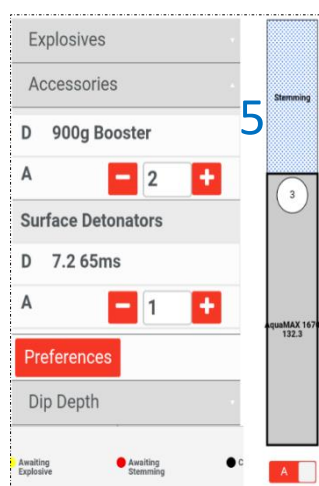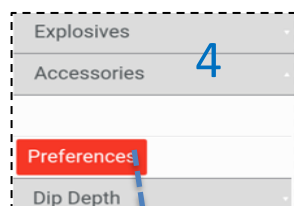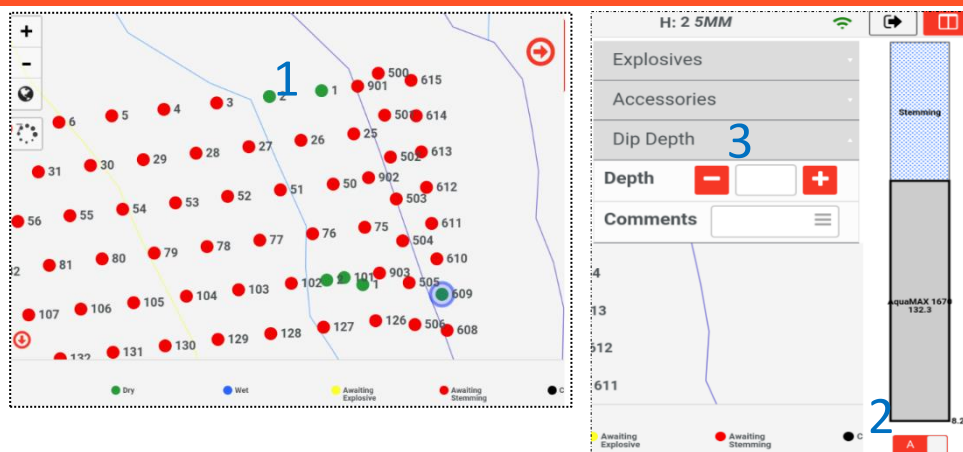

Blast Summary

1. Select the location and enter the required details for Blast summary.
2. Press Save to apply changes.

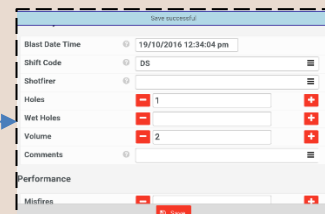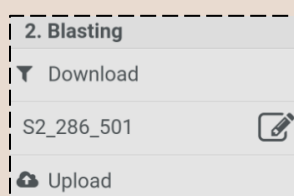

Navigation



Copy



Data list



Refresh-data



Wifi/3G
connected

p3