
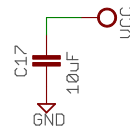


DNP - J5

It will only be used in the situation
where the user has to switch back
and forth between v50 and v33

If that is required they will hand solder
a header into the board and remove
the 0ohm resistor from R32

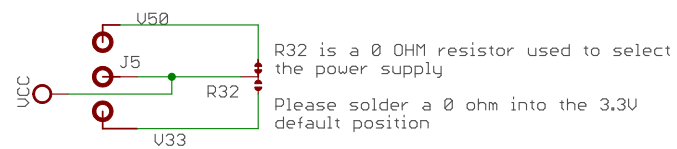

Power

TITLE: ww101board

Document Number:

REV:
2.1

Date: 10/14/17 3:10 PM

Sheet: 3/4

