


SIMILAR VIDEO TUTORIAL

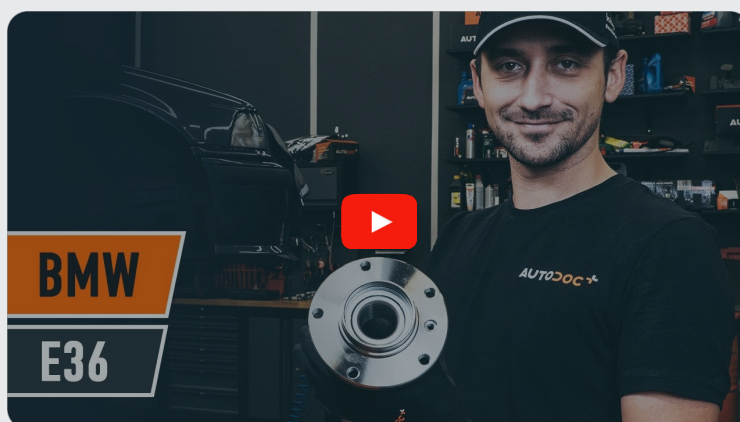

This video shows the replacement procedure of a similar car part on another vehicle

Important!


This replacement procedure can be used for:

BMW Z4 Roadster (E85) 3.0 si, BMW Z4 Roadster (E85) 3.2, BMW Z4 Roadster (E85) 3.0 i, BMW Z4 Roadster (E85) 2.5 i, BMW Z4 Roadster (E85) 2.2 i, BMW Z4 Roadster (E85) 2.0 i, BMW Z4 Roadster (E85) 2.5 si

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: BMW 3 Saloon (E36) 323i 2.5

REPLACEMENT: WHEEL BEARING – BMW Z4 ROADSTER (E85). TOOLS YOU NEED:

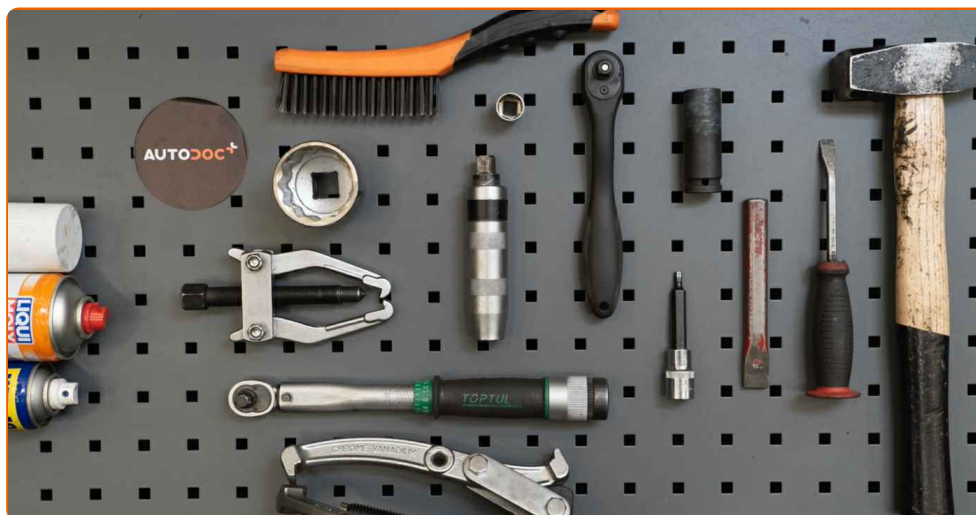

- Wire brush
- WD-40 spray
- All-purpose cleaning spray
- Brake cleaner
- Copper grease
- Torque wrench
- Drive socket # 16
- Drive socket # 46
- HEX bit No.H6
- Wheel impact socket #17
- Tap wrench
- Hammer
- Impact screwdriver
- Universal puller
- 3-Arm Gear Puller
- Flat chisel
- Crow bar
- Wheel chock

Buy tools


AUTODOC recommends:

- Do not re-use the bearing assembly of your BMW Z4 Roadster (E85) car.
- The wheel hub bearing replacement procedure is identical for both wheels on the same axle.
- All work should be done with the engine stopped.

REPLACEMENT: WHEEL BEARING – BMW Z4 ROADSTER (E85). TAKE THE FOLLOWING STEPS:

1 Secure the wheels with chocks.

2 Loosen the wheel mounting bolts. Use wheel impact socket #17.

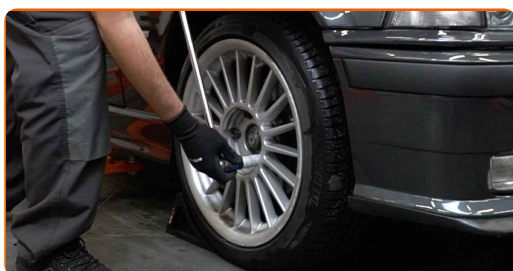

3 Raise the front of the car and secure on supports.

4 Unscrew the wheel bolts.



AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while unscrewing the fastening bolts.
BMW Z4 Roadster (E85)


5

Remove the wheel.




6

Spread the brake pads. Use a crowbar.

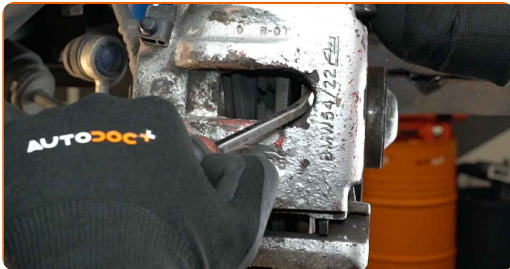


7

Clean the brake caliper bracket fasteners. Use a wire brush. Use WD-40 spray.

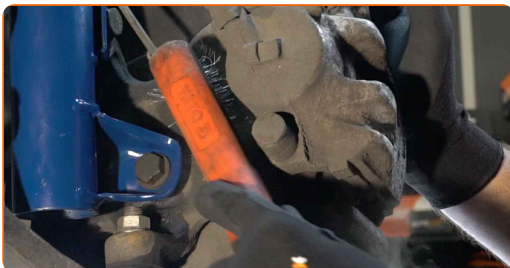

8

Unscrew the caliper bracket fastening. Use a drive socket #16. Use a tap wrench.

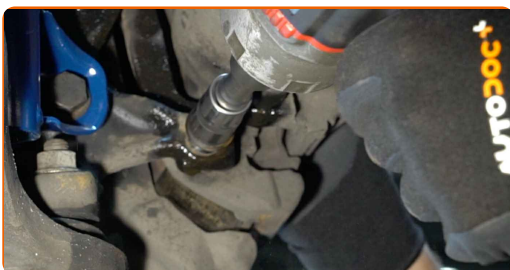

9

Remove the brake caliper together with its bracket.



Replacement: wheel bearing – BMW Z4 Roadster (E85). Tip from AUTODOC experts:

- Tie the caliper to the suspension or to the body with a wire without disconnecting from the brake hose to prevent depressurization of the brake system.
- Make sure that the brake caliper is not hanging on the brake hose.
- Don't press the brake pedal after the brake caliper has been removed. As a result, the piston can fall out from the brake cylinder, and brake fluid leakage and depressurization of the system may occur.

10

Clean the brake disc fastener. Use a wire brush. Use WD-40 spray.



11

Unscrew the brake disc fastening. Use HEX No.H6. Use an impact screwdriver.



12

Remove the brake disc.



13

Remove the wheel hub nut cap. Use a crowbar. Use a hammer.




14


Unstake the wheel hub retaining nut. Use a flat metal-working chisel. Use a hammer.




- 15 Unscrew the hub nut. Use a drive socket #46. Use a tap wrench.

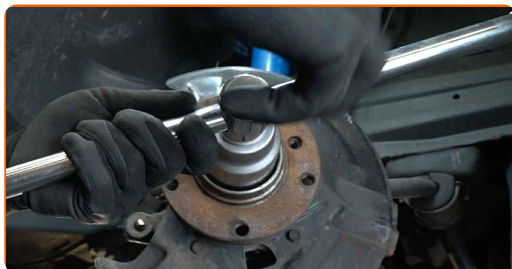

- 16 Remove the fastening nut.

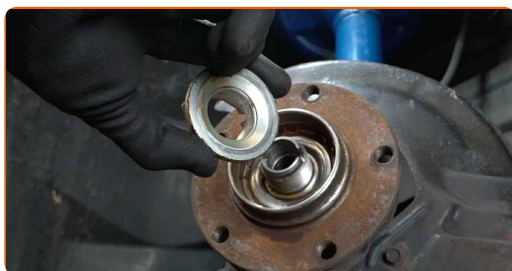

- 17 Remove the wheel hub together with the bearing. Use 3-Arm Gear Puller.

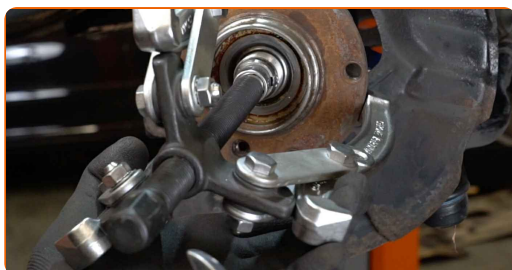


- 18 Pull the bearing inner race out of the wheel hub. Use a universal puller.



19

Clean the hub bearing mounting seat. Use a wire brush. Use all-purpose cleaning spray.

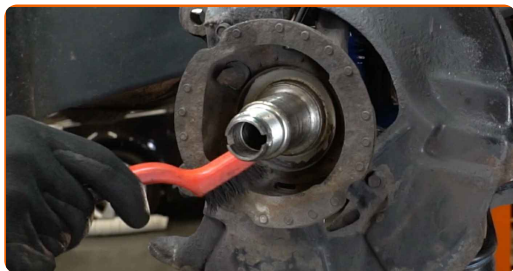

20

Install the new wheel hub with a bearing. Use a drive socket #46. Use a hammer.




21

Install the fastening nut.



22

Tighten the wheel hub nut. Use a drive socket #46. Use a torque wrench. Tighten it to 290 Nm torque.

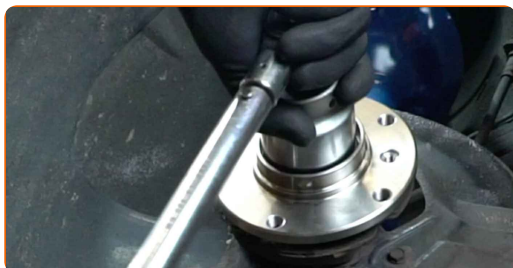


23

Restake the wheel hub retaining nut. Use a flat metal-working chisel. Use a hammer.



24

Treat the wheel hub nut. Use copper grease.

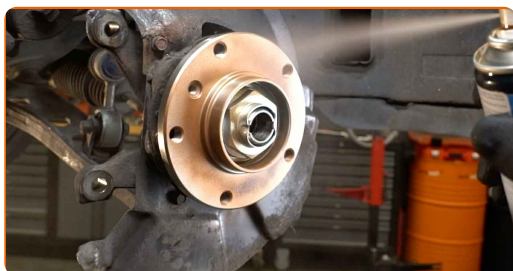


25

Install the cap of the hub nut. Use a drive socket #46. Use a hammer.



26

Install the brake disc.

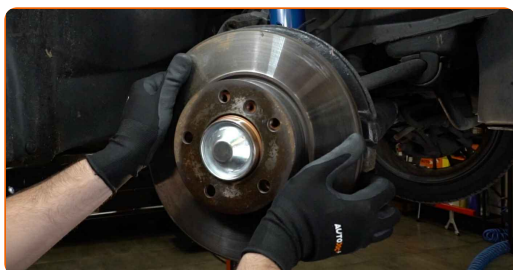

27

Tighten the brake disc fastening. Use HEX No.H6. Use a torque wrench. Tighten it to 9 Nm torque.



- 28 Install the brake caliper together with its bracket.




- 29 Tighten the brake caliper bracket. Use a drive socket #16. Use a torque wrench. Tighten it to 110 Nm torque.



- 30 Clean the wheel rim mounting seat. Use a wire brush.



- 31 Treat the surface where the brake disc contacts the wheel rim. Use copper grease.

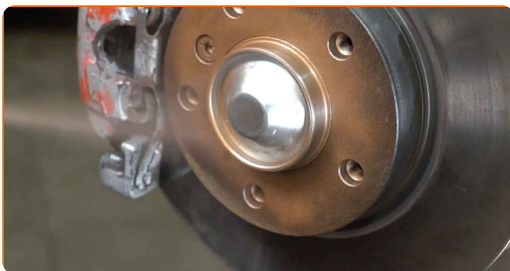

- 32 Clean the brake disk surface. Use a brake cleaner.

