


VIDEO TUTORIAL

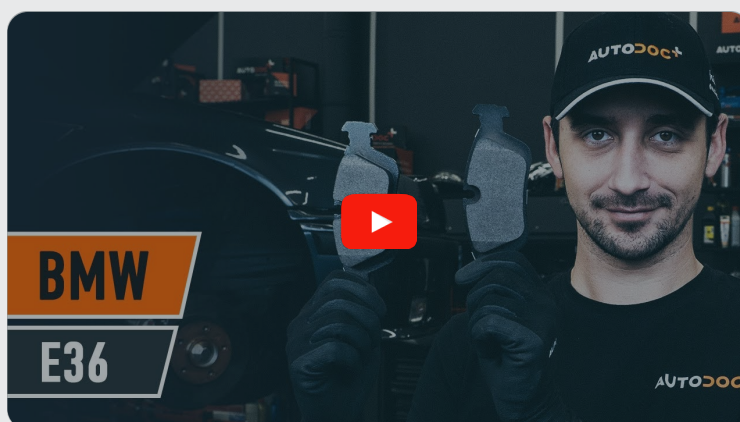


Important!

This replacement procedure can be used for:

BMW 3 Saloon (E30) M3 2.3, BMW 3 Saloon (E36) 316i 1.6, BMW 3 Saloon (E36) 318i 1.8, BMW 3 Saloon (E36) 318is 1.8, BMW 3 Coupe (E36) 318is 1.8, BMW 3 Saloon (E36) 320i 2.0, BMW 3 Coupe (E36) 320i 2.0, BMW 3 Saloon (E36) 325i 2.5, BMW 3 Coupe (E36) 325i 2.5, BMW 3 Saloon (E36) 325td 2.5, BMW 3 Saloon (E36) 325tds 2.5, BMW 5 Saloon (E28) 535i / M535i 3.5, BMW 5 Saloon (E34) 520i 2.0, BMW 5 Saloon (E34) 520i 2.0 24V, BMW 5 Saloon (E34) 524td 2.5, (+ 56)

The steps may slightly vary depending on the car design.

REPLACEMENT: BRAKE PADS – BMW E36. TOOLS YOU MIGHT NEED:

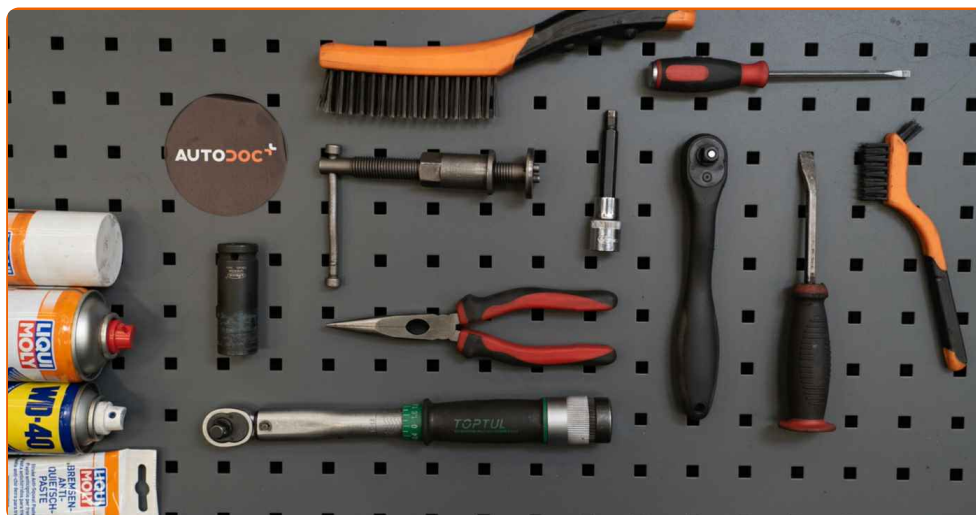

- Wire brush
- Nylon cleaning brush
- Brake cleaner
- Anti-squeal paste
- Copper grease
- Torque wrench
- HEX bit No.H7
- Wheel impact socket #17
- Ratchet wrench
- Round-nose pliers
- Flat screwdriver
- Brake caliper wind back tool
- Crow bar
- Wheel chock

BUY TOOLS


Replacement: brake pads – BMW E36. Tip from AUTODOC experts:

- Perform the replacement of brake pads in complete set for each axis. This provides effective braking.
- The replacement procedure is identical for all brake pads on the same axle.
- Please note: all work on the car – BMW E36 – should be done with the engine switched off.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

1

Open the hood. Unscrew the brake fluid reservoir cap.

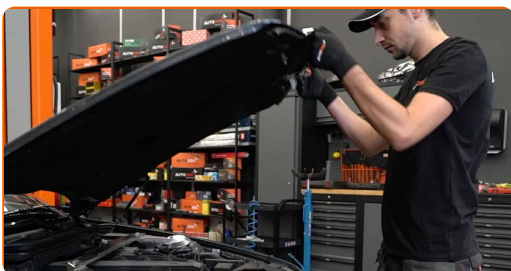**2**

Secure the wheels with chocks.

3

Loosen the wheel mounting bolts. Use wheel impact socket #17.



4

Raise the rear of the car and secure on supports.



5

Unscrew the wheel bolts.



AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while unscrewing the fastening bolts.
BMW E36


6

Remove the wheel.



7

Remove the brake pad wear sensor from the brake pad. Use round-nose pliers.

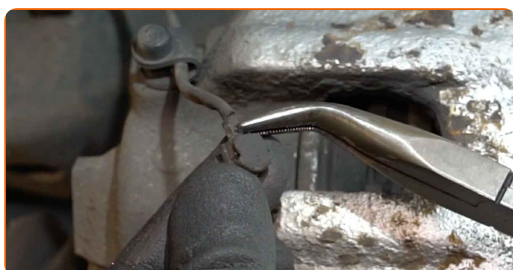

8

Remove the dust boot caps of the brake caliper guide pins. Use a crowbar.




9

Unscrew the brake caliper fastening. Use HEX No.H7. Use a ratchet wrench.




10

Detach the brake caliper retaining spring. Use a crowbar. Use a flat screwdriver.

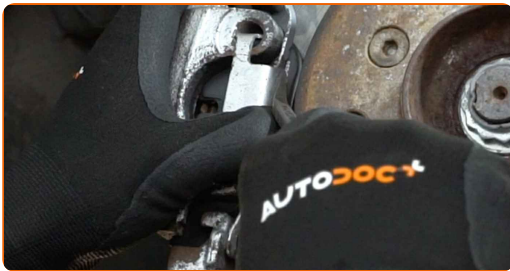


11

Spread the brake pads. Use a crowbar.

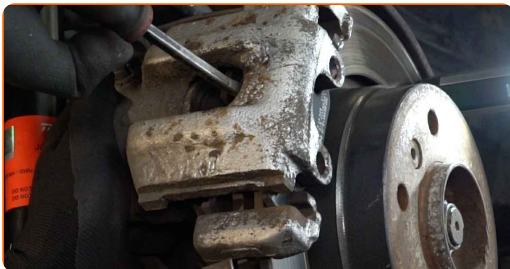

12

Remove the brake caliper.

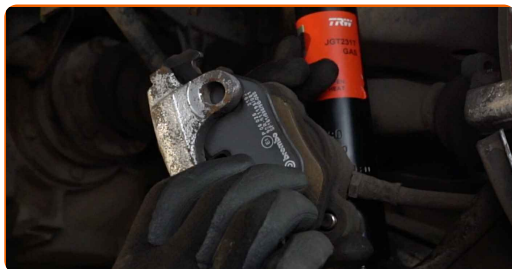


Replacement: brake pads – BMW E36. Tip from AUTODOC experts:

- Tie the caliper to the suspension or to the body with a wire without disconnecting from the brake hose to prevent depressurization of the brake system.
- Make sure that the brake caliper is not hanging on the brake hose.
- Don't press the brake pedal after the brake caliper has been removed. As a result, the piston can fall out from the brake cylinder, and brake fluid leakage and depressurization of the system may occur.
- Check the brake caliper bracket, brake caliper guide pins and boots. Clean them. Replace, if necessary.

13

Remove the brake pads.

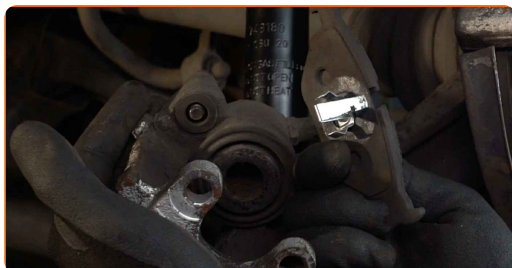


Replacement: brake pads – BMW E36. Professionals recommend:

- Measure the brake disc thickness. Upon reaching the wear limit the part must be replaced.

14

Clean the brake caliper bracket from dirt and dust. Use a wire brush. Use a brake cleaner.

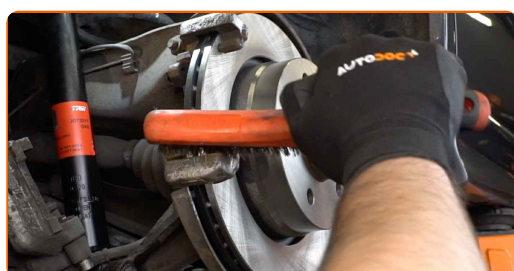


AUTODOC recommends:

- Replacement: brake pads – BMW E36. After applying the spray, wait a few minutes.

15

Treat the brake caliper piston. Use a nylon cleaning brush. Use a brake cleaner.

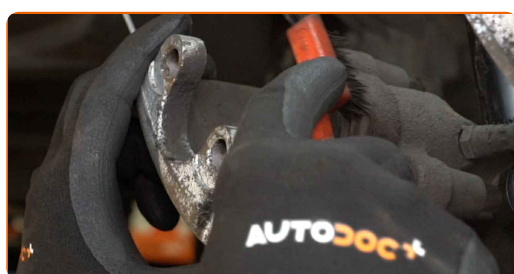

Replacement: brake pads – BMW E36. Tip from AUTODOC experts:

- After applying the spray, wait a few minutes.

16

Press in the brake caliper piston. Use brake caliper wind back tool.



17

Treat the brake pads in the area where their surface comes into contact with the brake caliper bracket. Use anti-squeal paste.



Replacement: brake pads – BMW E36. Tip:

- Make sure the disc surface is clean before installing the pads.

18

Install new brake pads.




Replacement: brake pads – BMW E36. AUTODOC recommends:

- Make sure the pads are installed with linings facing the disc.

19 Install the brake caliper and fix it.




20 Install the brake caliper retaining spring.

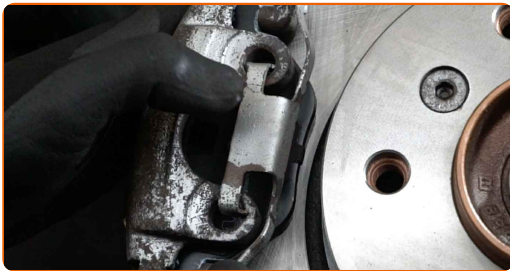


21 Tighten the brake caliper fasteners. Use HEX No.H7. Use a torque wrench. Tighten it to 30 Nm torque.



22 Install the dust boot caps of the brake caliper guide pins.

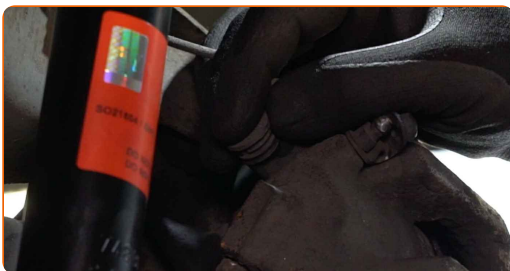

23 Install the wear sensor on the brake pads. Use round-nose pliers.

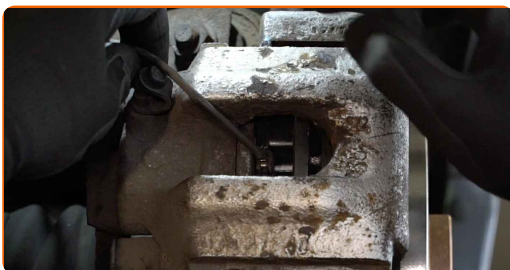

24

Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



25

Clean the brake disk surface. Use a brake cleaner.




AUTODOC recommends:

- Replacement: brake pads – BMW E36. After applying the spray, wait a few minutes.

26

Install the wheel.

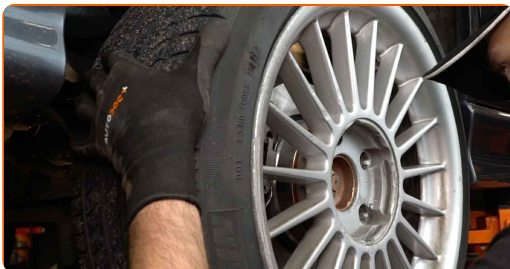

AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while screwing in the fastening bolts on the car. BMW E36